



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)



## Dynisco

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">MDT462F-1/2-1C-15/46-SIL2</a>	pressure sensor
<a href="#">1390/2/3</a>	TEMP CONTROLLER
<a href="#">1480-4-1-0-0</a>	MAGNIFY
<a href="#">PT462E-7CB-6/18</a>	PT462E-7CB-6/18
<a href="#">1490-4-0-0-1</a>	Pressure Transducer
<a href="#">2291SA51B14BSMMAACZZB300</a>	Melt Pressure Transducer
<a href="#">SPX2291SA56K09BSTTCCAZZ (229100000074)</a>	Melt Pressure Transducer
<a href="#">SPX2291SA56K11BSTTCCZZ (229100000147)</a>	
<a href="#">711600</a>	CONNECTOR
<a href="#">ATC990-4-0-1-1-0-1-000</a>	Temperature Controller
<a href="#">ATC990-4-0-1-1-1-1-0-0</a>	Process Controller
<a href="#">DYMT-S-M18-J-5-15-G-2M-A</a>	THERMOCOUPLE
<a href="#">DYMT-S-M18-J-7-15-G-2M-F13</a>	(Item No. 99880177)
<a href="#">DYMT-S-1/2-J-10-15-G-0.7M-F20</a>	Melt Temperature Sensor
<a href="#">ECHO-MV3-BAR-R21-UNF-6PN-S06-F18-NTR</a>	Pressure Transducer
<a href="#">ECHO-MV3-BAR-R23-UNF-6PN-S06-F18-NTR</a>	Pressure transducer
<a href="#">HDA320-3.5C-5V-S50</a>	Pressure Transducer
<a href="#">IDA354-3.5C-S61 (2V)</a>	Pressure Transmitter
<a href="#">MDA460-1/2-1M-15</a>	Melt Pressure Transducer
<a href="#">MDA462-1/2-3.5C-15/46</a>	Melt Pressure Transducer
<a href="#">MDT 462F-1/2-3.5C-15/4- SIL2</a>	Melt Pressure Transmitter
<a href="#">MDT462F-1/2-2C-15/46</a>	Pressure Sensor
<a href="#">MDT462FH-1/2-2C-15/46</a>	Pressure transmitter
<a href="#">MDT462F-1/2-3.5C-15/4...</a>	Melt Pressure Transmitter
<a href="#">MDT462F-M18-3.5C-50/46-A</a>	Melt Pressure Transmitter
<a href="#">MDT462F-M18-7C-15/46-A</a>	Pressure Sensor
<a href="#">462H0002</a>	pressure sensor +label and coupling
<a href="#">NPV876-1/2-50MPA-25/45</a>	Sensor
<a href="#">0160000132H11</a>	PRESSURE TRANSDUCER
<a href="#">PT 415D-5M-6-B314-B173</a>	Probe-Pressure
<a href="#">PT06A-10-6S SR</a>	connector
<a href="#">PT160-4M-H88</a>	Pressure Transducer
<a href="#">2291NA48K13BSMMAACZZ@10Kgf/cm</a>	Melt Pressure Transmitter
<a href="#">PT4624-35MPA-6/18</a>	Pressure transducer
<a href="#">PT462E-10M-6/18</a>	PRESSURE TRANSDUCER
<a href="#">PT462E-15M-6/18</a>	Pressure Transducer



Product	Description
<a href="#">PT462E-3.5CB-6/18</a>	PRESSURE SENSOR
<a href="#">PT462E-M18-7CB-6/18</a>	Pressure Transducer
<a href="#">2291SA48P21BUMMACAAA 229100000292</a>	Melt Pressure Transducer
<a href="#">22291SA56K21BSMMACAZZ</a>	Pressure Transmitters
<a href="#">TDA463-1/2-1M-15/46</a>	PRESSURE SENSOR BAR 1000 BAR 0-1000
<a href="#">TDT463F-1/2-3.5C-15/46-A</a>	Sensor
<a href="#">TDT463H-1/2-5C-15/46</a>	Melt Pressure Transmitter
<a href="#">TPT432A-5M-6/18</a>	SENSOR-PRESURE
<a href="#">TPT463E-5CB-6/18</a>	Pressure Transducer
<a href="#">P/N: 463L0008 Model: TPT463L-1/2-10M-6/18</a>	Melt Pressure Transmitter
<a href="#">UPR900-4-0-1-1-1-0-0-0</a>	process indicator
<a href="#">PT482-1/2-5M-6/18-B379 (0482300133B379)</a>	Pressure Transducer
<a href="#">ECHO MA4 MPA R23 UNF 6PN S06 F18 NTR</a>	Schmelzedruck - Sensor
<a href="#">Gegenstecker 6-PIN ( connector )</a>	Gegenstecker 6-PIN
<a href="#">MDT422F-M10-2C-7.6/152-A</a>	Melt Pressure Transmitter
<a href="#">MDA460-1/2-5C-32</a>	Melt Pressure Transmitter
<a href="#">MDT462F-M18-7C-15/46-SIL2</a>	Pressure Transducer
<a href="#">ECHO-MV3-MPA-R21-UNF-6PN-S06-F18-NTR</a>	Melt Pressure Transmitter
<a href="#">MDA462-1/2-3.5C-15/46 (0462300636)</a>	Melt Pressure Transducer
<a href="#">DM-INT-400</a>	pressure sensor
<a href="#">TPT4636-M14-50MPA-6/18-TC6</a>	Melt Pressure Transmitter
<a href="#">TDA463-1/2-5C-15/46</a>	Dynisco pressure and temperature transducer
<a href="#">MDT422F-1/2-3.5C-15/46-SIL2</a>	Pressure transmitter
<a href="#">MDT422F-1/2-2C-46/46-SIL2</a>	Melt Pressure Transmitter
<a href="#">TDT463F-1/2-7C-15/46-SIL2</a>	Pressure sensor
<a href="#">TDT432F-1/2-3.5C-15/46-D69/285-SIL2</a>	Melt Pressure Transmitter
<a href="#">DYMT-S-1/2-2xPT100/4-15-15-G</a>	Dynisco Melt Temperature Probe
<a href="#">432F0014S</a>	Pressure Sensor
<a href="#">MDT 422F-M18-35-15/46-A</a>	Melt Pressure Transmitter
<a href="#">MDA462-1/2-3.5C-23/46</a>	Melt Pressure Transducer
<a href="#">ECHO-MV3-BAR-R17-UNF-6PN-S06-F18-NTR</a>	Pressure Transducer
<a href="#">MDA462-1/2-7C-15/46</a>	Pressure transducer
<a href="#">SPX 2281NMDAC5M25A</a>	Melt Pressure Transducer
<a href="#">MDT462F-M18-3.5C-15/46-B171</a>	Melt Pressure Transmitter
<a href="#">PT4624-15M-6/18 range 0-15,000psi 4-20mA</a>	Pressure Transducer
<a href="#">SPX2243-N-A25-B-21-CE-FF-C-CE-ZZ</a>	Melt Pressure Transducer
<a href="#">MDA 422-1/2-3.5C-15/46-T80</a>	Pressure sensor
<a href="#">MDT 422F-1/2-3.5C-15/46-B171-B173-SIL2</a>	Pressure sensor
<a href="#">PT4624-15M-12/18-SIL2</a>	Pressure Transducer
<a href="#">2291SA48K20BSMMAACAK</a>	Melt Pressure Transducer
<a href="#">99880669</a>	Melt Temperature Probe
<a href="#">ECHO-MV3-BAR-R22-UNF-6PN-S06-NFL-NTR</a>	sensor
<a href="#">PT-462F-1/2-5M-6/18-A</a>	Pressure Transducer
<a href="#">PT-4624-1/2-5M-6/18-A</a>	Pressure Transducer
<a href="#">TPT463E-1/2-7.5M-6/18</a>	Melt Pressure Transmitter



Product	Description
<a href="#">ECHO-MV3-PSI-R23-UNF-6PN-S06-F18-TCJ</a>	Pressure Transducer
<a href="#">UPR90031100100</a>	Universal Pressure Controller
<a href="#">TPT432A-3M-6/18</a>	Melt Pressure Transducer with Thermocouple
<a href="#">TPT4634-5M-6/18</a>	Melt Pressure Transmitter
<a href="#">UPR900-3-1-0-0-0-0-0-0</a>	Pressure indicator
<a href="#">IDA334-1M-10V-D06</a>	Pressure Transducer
<a href="#">IDA330-2C</a>	Pressure Transducer
<a href="#">8702BCSX1546P</a>	sensor
<a href="#">PT422A-5M-6/18</a>	Pressure Sensor
<a href="#">5705BPSX1052</a>	Pressure Sensor
<a href="#">TPT4634.5M.6/18.GC9</a>	Transducer
<a href="#">PT4624-1/2-5M-6/18-SIL2</a>	pressure sensor
<a href="#">TPT4634-1/2-5M-6/18-SIL2</a>	pressure sensor
<a href="#">PT4626-1/2-35MPA-6/18</a>	Pressure Transducer
<a href="#">ATC990-411111000 (99000004)</a>	Process Controller
<a href="#">VT460H-3</a>	Pressure Transducer
<a href="#">PT303-2C</a>	Pressure Transducer
<a href="#">MDA462-1/2-5C-15/46</a>	Melt Pressure Transducer
<a href="#">DYMT-S-1/2-J-25-23-G</a>	Melt Temperature Sensor
<a href="#">PTB131-7.5M-M14-6/18-10V-K</a>	High temperatre melt pressure transducer
<a href="#">ATC990202011010</a>	Temperature Controller
<a href="#">PT462E-10M-6/18-B220</a>	Pressure Transducer
<a href="#">ECHO-MA4-MPA-R21-M14-6PN-S06-F18-NTR</a>	Pressure Transducer
<a href="#">PT4624-5M-6/18-B628</a>	Pressure Transducer
<a href="#">TPT4634-35MPA-12/18-SIL2</a>	sensor
<a href="#">TPT463E-10M-6/18-B628</a>	Pressure Sensor
<a href="#">PT462E-1M-6/18</a>	Pressure Transducer
<a href="#">TPT4634-5M-6/18-SIL2</a>	Pressure Sensors With SIL2
<a href="#">PT422A-10M-6/18</a>	Pressure Transducer
<a href="#">TPT4634-3M-6/18-SIL2</a>	Melt Pressure Transmitter
<a href="#">TDT432F-1/2-3.5C-46/46-S137-SIL2</a>	Transmitter
<a href="#">TDT432F-1/2-5C-46/46-S137-SIL2</a>	Transmitter
<a href="#">ATC9904001100000</a>	Temperature Controller
<a href="#">UPR90021000000</a>	Universal Pressure Controller
<a href="#">TPT463E-5M-6/18, 0-5000PS</a>	Pressure Sensor
<a href="#">PT460E-5M-9</a>	Pressure Sensor
<a href="#">2291NA48K13BSMMCACZZ@10K</a>	Melt Pressure Transducer
<a href="#">PT160-4M-M11 4000 PSI</a>	Pressure Transducer
<a href="#">PT160-4M-M11 CAP-4000PSI</a>	Pressure Transducer
<a href="#">TDT432F-1/2-5C-32/46-S137</a>	Melt Pressure Transmitter
<a href="#">MDT462H-1/2-5C-15/46 (462H0002)</a>	Pressure transmitters with integrated amplifier
<a href="#">TDT463F-1/2-5C-15/46-SIL2</a>	Melt Pressure Transmitter
<a href="#">PT06A-10-6S(SR) (711600)</a>	Pressure Connector
<a href="#">4622NA00P24CEDDAFZZGC7</a>	Melt Pressure Transducer
<a href="#">MDT422F-1/2-3.5C-15/46</a>	MELT PRESSURE TRANSDUCER



Product	Description
<a href="#">PT160-5M</a>	Pressure Transducer
<a href="#">UPR900-2-0-0-0-0-0-0 / 90000001</a>	Universal Pressure Controller
<a href="#">PT460E-5CB-6</a>	Pressure Transducer
<a href="#">E11711122</a>	Pressure Sensor
<a href="#">E11611131</a>	Sensor
<a href="#">2291NA48K13BUMMACAZZ</a>	Melt Pressure Transducer
<a href="#">2291NA48K11BUTTACAZZ</a>	Melt Pressure Transducer
<a href="#">ECHO-MV3-BAR-R22-UNF-6PN-S06-F30-NTR Artikelnr.: E12711131</a>	Pressure Transducer
<a href="#">9VT00030</a>	Pressure Sensor
<a href="#">1480-1-0-0-0 Artikelnr.: 14801000</a>	Pressure Transducer
<a href="#">UPR90030000000</a>	Pressure Sensor
<a href="#">MDA462-1/2-1M-15/46</a>	Melt Pressure Transducer
<a href="#">TPT/484-10M/6-18/B379</a>	Pressure sensor
<a href="#">UPR900-2-1-1-1-0-0-0</a>	Process Indicator
<a href="#">TPT463E-5M-6/18</a>	TRANSDUCTOR
<a href="#">MDA462-1/2-5C-15/46-B171</a>	Melt Pressure Transducer
<a href="#">SPX4222-S-A-00-B-13-EZ-DD-C-AA-ZZ-Z017</a>	Smart Pressure Transmitter
<a href="#">DYMT-S-1/2-RTD-15-15-G</a>	Melt Temperature Probe
<a href="#">0463380636 TDA463-1/2-3.5C-20/46</a>	Pressure and Temperature Transducer
<a href="#">TDT463L-1/2-7C-15/46</a>	Melt Pressure and Temperature Transducer
<a href="#">DYMT-F-1/2-PT100/3-0-32-G</a>	Melt Temperature Probe
<a href="#">MDT422F-1/2-3.5C-32/46-SIL2</a>	Melt Pressure Transducer
<a href="#">DYNA4-1M-15</a>	Pressure Rod
<a href="#">MDT420F-1/2-1M-15-SIL2</a>	Melt Pressure Transducer
<a href="#">PT-CAN 20-1/2-152-1MB</a>	Pressure Transducer
<a href="#">MDT462F-1/2-3.5C-15/91-SIL2</a>	Melt Pressure Transducer
<a href="#">DYMT-S-M18-J-18-15-G</a>	Melt Temperature Probe
<a href="#">PT4624-5M-6/18</a>	Melt Pressure Transducer
<a href="#">PT4624-1/2 -5M-6/18</a>	Melt Pressure Transducer
<a href="#">PT4624-35MPA-6/18-SIL2</a>	Pressure transducer
<a href="#">PT303-3C</a>	PRESSURE TRANSMITTER
<a href="#">TDA463-1/2-3.5C-15/46-PT100 , 0463300636PT100</a>	Melt Pressure and Temperature Transducer
<a href="#">1480-2-0-0-0</a>	Universal Input Indicator
<a href="#">DYMT-S-1/2-J-10-15-G(F13), code: DYMT-0110-N</a>	Melt Temperature Probe
<a href="#">ECHO-MV3-BAR-R23-UNF-6PN-S06-NFL-NTR</a>	Melt Pressure Transducer
<a href="#">MAP350-S-1101</a>	Pressure Sensor
<a href="#">MDT462H-1/2-5C-15/46</a>	Melt Pressure Transducer
<a href="#">TPT4634-35MPA-12/18-RTD-SIL2</a>	Melt Pressure and Temperature Transducer
<a href="#">TPT4634-35MPA-6/18-RTD-SIL2</a>	Pressure Transmitter
<a href="#">ECHO-MV3-BAR-R23-M18-6PN-S06-F18-NTR</a>	melt pressure sensor
<a href="#">DYMT-S-1/2-J-10-15-G-4M</a>	Melt Temperature Sensor
<a href="#">ECHO-MV3-PSI-R21-UNF-6PN-S06-F18-NTR</a>	
<a href="#">ECHO-MV3-PSIR22-UNF-6PN-S06-F18-NTR</a>	melt pressure sensors
<a href="#">UPR900-41110000</a>	Universal Pressure Indicator



Product	Description
<a href="#">DYMT-S-1/2-2XPT100/3-20-15-G-0.8M</a>	Dual RTD Melt Temperature Sensor
<a href="#">E12511121</a>	Pressure Sensor
<a href="#">MDA462-1/2-3.5C-10/46-T80</a>	Melt Pressure Transducer
<a href="#">PT462E-5M- 6/18</a>	
<a href="#">Model: ECHO-MV3-BAR-R21-UNF-6PN-S06-F18-NTR (E12611121)</a>	Pressure Switch
<a href="#">TPT4634-5CB-18/18-RTD2-SIL2</a>	Pressure transmitter
<a href="#">IDA353-3.5C-D44</a>	PRESSURE SENSOR
<a href="#">PT4626-35MPA-6/18</a>	Melt Pressure Transducer
<a href="#">2291NA48K11BSSRCACZZ (229100000432)</a>	Pressure Transducer
<a href="#">2291NA48K11BSSRCACZZ (229100000514)</a>	Pressure Transducer
<a href="#">MDT422F-1/2-3.5C-32/46-SIL2 (422F0129S)</a>	Melt Pressure Transducer
<a href="#">PT303-2.5C</a>	industrial sensor
<a href="#">2291NA48K11BSSRBACZZ ( 7 bar) 229100000514</a>	Low-Pressure Transducer
<a href="#">MDA462-1/2-5C-15/46-GC6</a>	Melt Pressure Transducer
<a href="#">MDT462F-1/2-2C-32/46-SIL2</a>	Pressure transmitter
<a href="#">P/N: 99880015 Type: DYMT-F-1/2-J-0-15-G (F13)</a>	heat detector
<a href="#">P/N: 9VT00037 Model: VT460-20</a>	Cable with connector
<a href="#">VT460-40</a>	Melt Pressure Gauge
<a href="#">MDT422F-M18-17-15/46-SIL2</a>	Pressure transmitter
<a href="#">MDT422F-1/2-35-15/46-SIL2</a>	Pressure transmitter
<a href="#">MDT462H-1/2-7C-15/46-B106-D85</a>	Sensor
<a href="#">PT462E-M18-5M-6/18</a>	Melt Pressure Transducer
<a href="#">ECHO-MV3-PSI-R23-UNF-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">4622NA00P24CEDDAAFZZGC5</a>	Melt Pressure Transducer
<a href="#">MDT462F-1/2-5C-15/46-T80-SIL2</a>	Pressure Sensor
<a href="#">PT462E-3M-6/30</a>	Melt Pressure Transducer
<a href="#">ECHO-MV3-PSI-UNF-R20-6Pn-S06- F30-NTR:</a>	Pressure Transmitter
<a href="#">ATC990411111000</a>	Process Controller
<a href="#">SPX2291SA48P21BUMMACAAA</a>	Melt Pressure Transducer
<a href="#">2291SA56K21BSMMACAZZ</a>	Melt Pressure Transducer
<a href="#">SPX 4222SA00B15CEDDAAAZZ</a>	Melt Pressure Transducer
<a href="#">MDA422-1/2-3.5C-23/46-GC8</a>	Melt Pressure Transducer
<a href="#">PT4624-15M-6/18-GC7</a>	Melt Pressure Transducer
<a href="#">SPX4622NA00P24CEDDAAFZZGC7</a>	Melt Pressure Transducer
<a href="#">PT4626-7.5M-6/18-B628</a>	Melt Pressure Transducer
<a href="#">2242NA00K23CEFFCACAAB300</a>	Melt Pressure Sensor
<a href="#">DYMT-S-1/2-J-5-15-G-4M-A-F13</a>	Melt pressure sensor
<a href="#">Model: E13612121 (ECHO-MV3-MPA-R21-UNF-HIR-S06-F18-NTR)</a>	Pressure Transmitter
<a href="#">1480-2-1-0-0</a>	Digital Pressure Indicator
<a href="#">1490-2-0-0-0-0</a>	Digital Temperature and Pressure Indicator
<a href="#">1490-2-1-1-1-0</a>	Universal indicator
<a href="#">BP420-1/2-9.5M-6</a>	Melt Pressure Transducer
<a href="#">PT4624-3M-6/18-SIL2 (Art. Nr. 04624000130S)</a>	Melt Pressure Transducer



Product	Description
<a href="#">1490-2-1-0-0-1</a>	Digital Temperature and Pressure Indicator
<a href="#">PT419-5M-6/18 Art.Nr.: 0419000133</a>	Melt Pressure Transducer
<a href="#">UPR90030000000 (als Anzeige für PT482 Gerät mit allarm)</a>	Digital Pressure Indicator with Alarm
<a href="#">ECHO-MV3-PSI-R21-UNF-6PN-S06-F18-NTC does not exist</a>	
<a href="#">MDT462F-1/2-3.5C-15/46-B106-SIL2</a>	Melt Pressure Transducer
<a href="#">ATC990-3-1-0-0-1-1-0-1-0</a>	Process Controller
<a href="#">PT460E-7.5M-6</a>	pressure sensor
<a href="#">MDT-422F-1/2-3.5C-15/46-A</a>	Mass pressure sensor
<a href="#">MDT462F-1/2-7C-15/46-SIL2</a>	Pressure Sensor
<a href="#">PT4624-20MPA-6/18-SIL2</a>	Probe
<a href="#">MDT 420F – ½ - 1M – 15</a>	Melt Pressure Transducer
<a href="#">PT4624-15M-6/18-SIL2</a>	Melt Pressure Transducer
<a href="#">MDT462F-M18-2C-23/46-SIL2</a>	Melt Pressure Transducer
<a href="#">MDT462F-M18-3,5C-32/46-SIL2</a>	Pressure Sensor
<a href="#">TDT463F-M18-3.5C-38/46-SIL2</a>	Melt Pressure and Temperature Transducer
<a href="#">IDA353-3.5C-10V-D44</a>	Melt Pressure Transducer
<a href="#">VT460-6</a>	Cable
<a href="#">HDA320-3.5C-10V-S50</a>	pressure transducer
<a href="#">PT303-7C &lt;FM&gt;</a>	High-Temperature Pressure Transducer
<a href="#">PT4624-5M-12/18-SIL2</a>	Melt Pressure Transducer
<a href="#">UPR900-21010000</a>	Universal Pressure Indicator
<a href="#">E11611121</a>	Pressure Transmitter
<a href="#">VT460-20 m</a>	Cable
<a href="#">DYMT-S-M18-J-5-15-G-4m-A-F13</a>	Melt Temperature Sensor
<a href="#">929020</a>	Cable Assy
<a href="#">PT160-3M-H11</a>	Transducer
<a href="#">IDA354-5C-10V-D44</a>	Melt Pressure Transducer
<a href="#">ATC990400110000 (Art.Nr: 99000001)</a>	Pump
<a href="#">IDA353-3.5C</a>	Pressure transducer
<a href="#">E12611221</a>	Pressure Transmitter
<a href="#">ECHO-MV3-BAR-R21-UNF-6PN-S09-F18-NTR</a>	Pressure Transmitter
<a href="#">SPX2291SA48B13BSMMCACAK</a>	Melt Pressure Transducer
<a href="#">BP420-1/2-5.5M-1.81</a>	Melt Pressure Transducer
<a href="#">BP420-1/2-9.5M-1.81</a>	Melt Pressure Transducer
<a href="#">PT4626-10M-6/18</a>	Melt Pressure Transmitter
<a href="#">APT3291-50</a>	High-Accuracy Pressure Transducer
<a href="#">DYMT-S-1/2-J-5-15-G (F13)</a>	Melt Temperature Sensor
<a href="#">DYMT-S-1/2-PT100/4-15-15-G-1M-F34</a>	Melt Temperature Sensor
<a href="#">MDT422F-1/2-1M-15/46-SIL2</a>	PRESSURE SENSOR
<a href="#">MDT420F-1/2-5C-15-SIL2</a>	Pressure transducer
<a href="#">MDT422F-M10-3.5C-15/46-GC7</a>	Melt Pressure Transducer
<a href="#">TPT463E-1/2-15M-6/18</a>	Pressure Transmitter
<a href="#">MDA460-1/2-5C-15-B106</a>	Pressure Transducer
<a href="#">BP420-1/2-9M-6</a>	Melt Pressure Transducer
<a href="#">TDA463-1/2-3.5C-76/46-S137/1</a>	Melt Pressure and Temperature Transducer



Product	Description
<a href="#">ECHO-MV3-BAR-R21-UNF-6PN-S12-F18-NTR</a>	Pressure Transmitter
<a href="#">ECHO-MV3-BAR-R17-UNF-6PN-S09-F18-NTR</a>	Pressure Transmitter
<a href="#">MDT462F-1/2-3.5C-15/46-SIL2</a>	Pressure Transmitter
<a href="#">TDA463-1/2-3.5C-15/46 - PT100</a>	Melt pressure transducer
<a href="#">PT462E-3M-6/18</a>	Pressure Transducer
<a href="#">MDA422-1/2-3.5C-15/46</a>	Pressure Transducer
<a href="#">2291E48K17BSMMACAZZ</a>	Melt Pressure Transducer
<a href="#">Model: 2291EA48K17BSMMACAZZ</a>	Melt Pressure Transducer
<a href="#">Model: TPT4634-5M-6/36-RTD3-SIL2</a>	Melt Pressure and Temperature Transmitter
<a href="#">PT4624-3.5CB-6/18</a>	Melt Pressure Transducer
<a href="#">ECHO-MA4-BAR-UNF-R21-6PN-S06-F18</a>	Pressure Transmitter
<a href="#">TPT4634-35MPA-6/18-SIL2</a>	Melt Pressure Transmitter
<a href="#">DYKE-1/2-K-5-15-G-(F13)</a>	Melt Temperature Sensor
<a href="#">MDT462F-M18-3.5C-15/46-SIL2 (462F0156S)</a>	Melt Pressure Transducer
<a href="#">PT100 S/N: 9835035</a>	TRANSMITTER
<a href="#">DYMT S M14 RTDPT100 05 15 G</a>	Melt Temperature Sensor
<a href="#">MDT422F-1/2-3.5C-23/46-SIL2</a>	Melt Pressure Transducer
<a href="#">PT462E-10M-9/18-B628</a>	Melt Pressure Transducer
<a href="#">99000045</a>	Universal Pressure Indicator
<a href="#">MDA412-1/2-35-15/46</a>	Melt Pressure Transducer
<a href="#">14804000</a>	Panel Indicator
<a href="#">2281SLDCA4K30A</a>	
<a href="#">DYMT-S-1/2-J-20-15-G</a>	Melt Temperature Sensor
<a href="#">462L0004</a>	Pressure Sensor
<a href="#">MDT422F-1/2-5C-15/46-SIL2</a>	MDT4X2F Series Pressure Sensors With SIL2
<a href="#">PT4654XL 5M</a>	Thermocouple with calibration
<a href="#">ECHO-MV3-PSI-R24-UNF-6PN-S06-F18-TCJ</a>	pressure transducer
<a href="#">04636000824B115</a>	Pressure Sensor Transmitter
<a href="#">ECHO-MA4-UNF-PSI-R23-6PN-S12-F18-TCJ</a>	Pressure Transmitter
<a href="#">TPT4636-5M-6/18-SIL2</a>	Melt Pressure Transmitter
<a href="#">BP420-1/2-7.5M-6</a>	Melt Pressure Transducer
<a href="#">TPT4636-5M-6/18</a>	Pressure transducer
<a href="#">ECHO-MA4-BAR-R21-UNF-6PN-S06-F30-TCJ</a>	MELT PRESURE SENSOR
<a href="#">Mdt420L-1/2-7C-15</a>	Melt Pressure Transducer
<a href="#">ECHO-MV3-BAR-R20-UNF-6PN-S06-NFL-NTR</a>	Pressure Transmitter
<a href="#">ECHO-MV3-BAR-R24-UNF-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">0462000136</a>	PRESSURE SENSOR
<a href="#">ECHO-MV3-PSI-R21-UNF-6PN-S06-F18-TCJ</a>	
<a href="#">PT4624-5M-6/18-B171-SIL2</a>	Melt Pressure Transducer
<a href="#">MDT462F-1/2-5C-7.6/46-SIL2</a>	Melt Pressure Transducer
<a href="#">MDT462F-1/2-2C-15/46-SIL2</a>	Pressure sensor
<a href="#">TPT4636-10M-12/18</a>	Pressure Transducer
<a href="#">SPX4622NA00B20CEDDAAFZZGC0</a>	Pressure switch
<a href="#">SPX4622NA00B20CEDDAAFZZGC6</a>	Pressure switch
<a href="#">PT4624-5M-9/18-B628-SIL2</a>	Pressure Sensors With SIL2



Product	Description
<a href="#">PT4604-3M-6-SIL2</a>	Pressure Sensors With SIL2
<a href="#">ECHO-MA4-UNF-BAR-R21-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">UPR700-1-3-3-B97</a>	Universal Pressure Indicator
<a href="#">ECHO-MV3-BAR-R21-UNF-6PN-S06-NFL-NTR</a>	pressure sensor
<a href="#">ECHO-MV3-UNF-PSI-R23-6PN.-S06-F18-TCJ</a>	Pressure Transmitter
<a href="#">2291SA56K13BSMMCAZZ</a>	Melt Pressure Transducer
<a href="#">4222SA00B21FEFFBAAZZ</a>	pressure transmitter
<a href="#">4222SA00B17FEFFBAAZZ</a>	pressure transmitter
<a href="#">PT4624-10M-9/18-SIL2</a>	
<a href="#">ECHO-MA4-BAR-R17-UNF-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">UPR900-2-1-0-0-0-0-0-0</a>	Universal Pressure Indicator
<a href="#">1490-410000</a>	Pressure Indicator
<a href="#">1490-4-1-0-1-1</a>	Panel Indicator
<a href="#">ATC990300011000</a>	Process Controller
<a href="#">IDA353-5C-10V-D30/400</a>	Transmitter
<a href="#">DYN-X-MA-5M-6/18-SIL2</a>	Melt Pressure Transducer
<a href="#">IDA-354-SC- 5788-1</a>	Melt Pressure Transducer
<a href="#">DYMT-S-M18-J-7-15-G-2M-A-F13</a>	Melt Temperature Sensor
<a href="#">PT422A-1M-6/18</a>	Pressure Transducer
<a href="#">ECHO-MV3-PSI-R22-UNF-6PN-S06-F18-TCJ</a>	Pressure Transmitter
<a href="#">MDT422F-1/2-2C-15/46-SIL2</a>	MDT4X2F Series Pressure Sensors With SIL2
<a href="#">pressure indicator for E12611121</a>	Universal Pressure Indicator
<a href="#">ECHO-MV3-PSI-R21-UNF-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">Model: PT4626-10M-6/18-T80</a>	Melt Pressure Transducer
<a href="#">PT4626-5M-6/18</a>	Melt Pressure Transducer
<a href="#">PT311JA-1M</a>	TRANSDUCER
<a href="#">TDT432F-1/2-3.5C 32/46 -S147A</a>	Melt Pressure and Temperature Transducer
<a href="#">MDA460-M18-7C-15</a>	Melt Pressure Transducer
<a href="#">2280SGKAC5P34AK296 (228000000236)</a>	Pressure sensor
<a href="#">BP420-1/2-7M-6</a>	Melt Pressure Transducer
<a href="#">PT422A-50MPA-9/18-C16</a>	
<a href="#">TI422JA-060-1-P3B</a>	Temperature Sensor
<a href="#">0432000135</a>	Universal Pressure Indicator
<a href="#">TPT412-10M-6/18</a>	Melt Pressure Transmitter
<a href="#">PN: 901015, Type: BP420-1/2-8.5M-6</a>	Melt Pressure Transducer
<a href="#">TG422J-203-90-2-210-1</a>	Temperature Sensor
<a href="#">MDT462F-1/2-1M-15/46-SIL2 (462F0166S)</a>	SENSOR
<a href="#">2281SLDCA4K 27A</a>	STRAIN GAUGE TRANSMITTER
<a href="#">MDT422F-1/2-3.5C-15-76-SIL 2</a>	TRANSMITTER
<a href="#">PT4624-5M-6/18 0-5000PSI</a>	Pressure Transmitter
<a href="#">IDA353-7C</a>	Melt Pressure Transducer
<a href="#">14804101</a>	panel indicator
<a href="#">PT482-15M 6/18</a>	
<a href="#">2243NA25B14CEFFBCEZZ</a>	PRESSURE TRANSMITTER
<a href="#">2243NA25B21CEFFCCEZZ</a>	PRESSURE TRANSMITTER



Product	Description
<a href="#">2243NA25B20CEFFBCEZZ</a>	PRESSURE TRANSMITTER
<a href="#">2243NA25B16CEFFCCEZZ</a>	PRESSURE TRANSMITTER
<a href="#">DYMT-S-1/2-J-5-15-G-0.7M-F13</a>	probe
<a href="#">IDA354-5C-10V-S78B-1</a>	Pressure sensor
<a href="#">MDT462F-1/2-3.5C-15/46-T80-GC9</a>	Pressure Transmitter
<a href="#">P/N: 103444,Type: CET1-AX-LDA-00-50X-SC</a>	SECURITY SYSTEMS
<a href="#">VERT-MA4-MM1-NDC-BAR-R21-UNF-6PN-S06-F18-NTR-NCC</a>	PRESSURE TRANSDUCER
<a href="#">PT4624-7.5M-6/18-T80-GC9</a>	Melt Pressure Transducer
<a href="#">TPT 463 E-1.5M 6/18</a>	Pressure Transducer
<a href="#">ECHO-MA4-UNF-BAR-R23-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">PT4624-5M-6/18-SIL2</a>	pressure sensor
<a href="#">MDA462-1/2-3.5C-15/46 09-15-08342258</a>	Melt Pressure Transducer
<a href="#">MDA462-1/2-1C-15/46</a>	Melt Pressure Transducer
<a href="#">TPT463E-10M-9/18</a>	Melt Pressure Transmitter
<a href="#">14804100; sn: 786051010 002</a>	Universal Pressure Indicator
<a href="#">PG442R-5M-6/30</a>	Melt Pressure Gauge
<a href="#">PT4624-5M-6/18-A</a>	MELT PRESSURE SENSOR
<a href="#">PT415D-7.5M-6-B314</a>	Pressure Sensor
<a href="#">IDA 334-2C</a>	TRANSMITTER
<a href="#">1490-2-1-1.0</a>	Digital Indicator
<a href="#">PT422A-3M-6/30</a>	Melt Pressure Transducer
<a href="#">DYMT-F-1/2-J-15-15-1</a>	TEMP SENSOR
<a href="#">901383 type J</a>	Melt Temperature Sensor
<a href="#">Model: MDT422F-1/2-2C-32/46-B171-SIL2</a>	Pressure transmitter
<a href="#">PT4624-35MPA-12/18-SIL2</a>	Melt Pressure Transducer
<a href="#">4622NA00B21CEDDAAFZZGC7</a>	Melt Pressure Transducer
<a href="#">DYMT-S-1/2-PT100/4-30-15-G</a>	Melt Temperature Sensor
<a href="#">MDA460-1/2-7C-15</a>	transducer
<a href="#">MDT420F-1/2-7C-15-SIL2</a>	Melt Pressure Transducer
<a href="#">PT462E-5M-6/30</a>	Melt Pressure Transmitter
<a href="#">NP4624-1/2-35MPA-15/45-SIL2 PT4624-35MPA-6/18-SIL2)</a>	PRESSURE TRANSMITTER
<a href="#">NP4634-1/2-35MPA-J-SIL2 TPT4634-35MPA-6/18-SIL2)</a>	PRESSURE TRANSMITTER
<a href="#">MDA422-1/2-5C-15/45</a>	pressure Sensor
<a href="#">PT4624-7.5M-9/18-A</a>	Transducer diaphragm
<a href="#">PT4626-10M-12/18</a>	TRANSDUCER
<a href="#">IDA354-3.5C-10V-S78B</a>	pressure sensor
<a href="#">ECHO-MV3-BAR-R22-UNF-6PN-S06-F18-NTR</a>	
<a href="#">MDT460L-1/2-1M-15</a>	sensor
<a href="#">cable for MDT460L-1/2-1M-15</a>	cable
<a href="#">PT4624-50MPA-6/18-A</a>	pressure sensor
<a href="#">200925</a>	Melt Pressure Sensor
<a href="#">TPT4634-5M-6-30-SIL2</a>	Melt Pressure Transmitter
<a href="#">ECHO-MA4 BAR R21 UNF 6PN SO6 F18 NTR</a>	sensor
<a href="#">4622NA00P24FEDDAAFZZGC8</a>	Melt Pressure Transducer
<a href="#">4622NA00B20CEDDAAFZZGC6</a>	Melt Pressure Transducer



Product	Description
<a href="#">socket for PT4624-20MPa-6/18-SIL2</a>	socket
<a href="#">MDT462F-M18-2C-32/46-GC6</a>	Melt Pressure Transducer
<a href="#">DYMT-S-M18-PT100/4-5-38-G</a>	Melt Temperature Sensor
<a href="#">4622NA00B20FEDDAAFZZGC0</a>	Melt Pressure Transducer
<a href="#">149041000</a>	Digital Indicator
<a href="#">PT4624-5M-6/30-SIL2</a>	Melt Pressure Transducer
<a href="#">MDT422H-1/2-7C-15/46-SIL2</a>	mass pressure sensor
<a href="#">MDT462F-1/2-5C-15/46-SIL2</a>	Pressure transmitter sensor
<a href="#">MDA462-1/2-2C-15/46</a>	Melt Pressure Transducer
<a href="#">BP420-1/2-5.5M-6</a>	Melt Pressure Transducer
<a href="#">ECHO-MV3-BAR-R21-UNF-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">234908</a>	thermocouple for sensor Model TPT
<a href="#">TPT484-5M-6/30-B379</a>	Probe
<a href="#">470000172</a>	Probe
<a href="#">PT4624-10MPa-6/18-SIL2</a>	Probe
<a href="#">DYMT-S-1/2-PT100-4-15-23-G-4</a>	Melt Temperature Sensor
<a href="#">149010000</a>	Digital Process Indicator
<a href="#">MA4-PSI-R23-UNF-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">PT4624-2CB-6/18-B171-SIL2</a>	TRANSMITTER, MELTING PRESSURE
<a href="#">MDT422F-1/2-2C-15/46-B171-SIL2</a>	BCF EXTRUDER PRESSURE SENSOR
<a href="#">DYKE-1/2-J-0-15G (F13)</a>	Melt Temperature Sensor
<a href="#">PT-462E-5M-12/18</a>	Melt Pressure Transducer
<a href="#">ECHO-MA4-BAR-R23-UNF-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">301AUSX1546 (IDA332-5C-4-20MA)</a>	Melt Pressure Transducer
<a href="#">NP462-1/2-50MPa-15/45 (MDA462-1/2-5C-15/46)</a>	pressure sensor
<a href="#">PT422A-7.5M-6/30</a>	Melt Pressure Transducer
<a href="#">ECHO-MA4-BAR-R21-UNF-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">ECHO-MV3-PSI-R22-UNF-6PN-S06-F30-NTR</a>	Pressure Transmitter
<a href="#">E22711121</a>	Pressure Transmitter
<a href="#">462L0010</a>	pressure sensor
<a href="#">MDT462F-M18-7C-15/46-GC9</a>	Pressure Transducer
<a href="#">E32711121</a>	Pressure Transmitter
<a href="#">4672SA00B21EADDAAAZZ</a>	Melt Pressure Transducer
<a href="#">ATC990400110000</a>	Advanced Process Controller
<a href="#">149021000</a>	Digital Indicator
<a href="#">0462000133B70</a>	Melt Pressure Transducer
<a href="#">929008</a>	Connector cable
<a href="#">PT 4624-1/2-70MPa-15/45-B171-S1L2</a>	Melt Pressure Transducer
<a href="#">PT462E-7.5M-6/30-T80</a>	pressure probe
<a href="#">4622NY00P22CEDDAAFZZGC9</a>	Pressure Sensor
<a href="#">ECHO-MV3-PSI-R21-6PN-S06-F18</a>	Pressure Transmitter
<a href="#">MDT462F 1/2 5C 15/46</a>	Melt Pressure Transducer
<a href="#">IDA354-5C-S78B</a>	Shutdown Tonnage Pressure Sensor
<a href="#">MDT422F-1/2-2C-32/46-B171-SIL2</a>	Pressure transmitter
<a href="#">422F-1/2-3.5C-15/46-SIL2</a>	Melt Pressure Transducer



<b>Product</b>	<b>Description</b>
<a href="#">PT462E-50MPA-6/18</a>	Melt Pressure Transducer
<a href="#">MDT462F-1/2-3.5C-15/46-GC8</a>	Housing transducer
<a href="#">TDA463-1/2-3.5C-25/46</a>	sensor
<a href="#">NP422-1/2-70MPA-15/45</a>	PRESSURE TRANSMITER
<a href="#">BP420-1/2-5M-6</a>	Melt Pressure Transducer
<a href="#">MDA462-1/2-3.5C-32/46</a>	Melt Pressure Transducer
<a href="#">PT462E-10M-6/8</a>	Transducer
<a href="#">PT4624-3.5CB-6/18-SIL2</a>	Melt Pressure Transmitter
<a href="#">4622SA00B21FEDDAAZZ</a>	Melt Pressure Transducer
<a href="#">PT199-2.5C</a>	Melt Pressure Transducer
<a href="#">MDT422F-1/2-3.5C-15/46-GC7</a>	Pressure Transmitter
<a href="#">MDT422F-M10-3.5C-15/76-GC7</a>	Pressure transmitter
<a href="#">DYMT-S-1/2-Pt100/3-10-15-G</a>	Temperature probe
<a href="#">TPT463E-10M-6/18</a>	Melt Pressure Transducer
<a href="#">MDT462F-1/2-3.5C-15/46-B171-SIL2</a>	Pressure transmitter
<a href="#">ATC990-3-1-1-1-1-0-1-1</a>	Pressure controller
<a href="#">PT462E-35MPA-6/18</a>	Melt Pressure Transducer
<a href="#">4222SA00B15FEFFBAAZZ</a>	Melt Pressure Transducer
<a href="#">TPT4634-3M-12 / 18-RTD1-SIL2</a>	TRANSDUCER
<a href="#">TPT4634-35B-6/18-S137-SIL2</a>	PRESSURE TRANSDUCERS
<a href="#">TDT432F.1/2.5C.32/46.S137</a>	MELT PRESSURE TRANSDUCER
<a href="#">ECHO-MV3-PSI-R21-UNF-6PN-S06-F06-F18-NTR</a>	Pressure Transmitter
<a href="#">ECHO-MV3-BAR-R22-UNF-6PN-S06-F18-TCJ</a>	Dynisco pressure and temperature transducer
<a href="#">MDA460-1/2-1M-15 (0460300642)</a>	PRESSURE TRANSDUCER
<a href="#">E13512121</a>	PRESSURE TRANSDUCER
<a href="#">ATC990.2.0.0.0.1.0000</a>	PRESSURE REGULATOR
<a href="#">MDT422H.1/2.7C.15/46 24V</a>	MELT PRESSURE TRANSDUCER
<a href="#">TPT4636H-10M 6/18</a>	MELT PRESSURE TRANSDUCER
<a href="#">MDT460L-1/2-7C-15</a>	Melt Pressure Transducer
<a href="#">BP420-1/2-7.5M-6-1/4NPT</a>	Melt Pressure Transducer
<a href="#">PT4624-3M-6/30-SIL2</a>	PRESSURE MELT TRANSMITTER
<a href="#">4P708013 / It Plug – Blind stop</a>	Gauge Plug
<a href="#">DYMT-F-M18-Pt100/4-0-23-G</a>	
<a href="#">VT460-16</a>	Pressure cable
<a href="#">VT460-10</a>	Pressure cable
<a href="#">TDT463FH-1/2-3.5C-15/46-SIL2</a>	Melt Pressure and Temperature Transducer
<a href="#">LMFI-1NNNNNN</a>	Linear Displacement Sensor
<a href="#">MDT462H-1/2-5C-15/46-SIL2</a>	Melt Pressure Transducer
<a href="#">MDT462H-1/2-3.5C-15/46-SIL2</a>	Melt Pressure Transducer
<a href="#">MDT462H-1/2-1M-15/46</a>	Pressure Sensor
<a href="#">VERT-MV3-MM1-NDC-PSI-R23-UNF-6PN-S06-F18-TCJ-NCC</a>	Pressure Transmitter
<a href="#">MDT460F-1/2-5C-15-M1100-GC3</a>	Melt Pressure Transducer
<a href="#">E12511211 / 09-10-14392175</a>	Pressure Transmitter
<a href="#">ECHO-MV3-BAR-R20-UNF-6PN-S09-NFL-NTR</a>	Pressure Transmitter
<a href="#">IDA354-2C-10V-S143</a>	Pressure transmitter



<b>Product</b>	<b>Description</b>
<a href="#">PT462E-M10-35MPA-15/46</a>	Melt Pressure Transducer
<a href="#">0051-30</a>	Piston Assembly
<a href="#">MDT462F-M18-2C-23/46-GC6</a>	Sensor
<a href="#">PT460E-5M-6</a>	sensor
<a href="#">ECHO-MV3-PSI-R21-6PN-S06-NFL-NTR</a>	sensor
<a href="#">SPX 2242-S-A-00-M-20-CE-DD-B-AC-ZZ-SIL2-J8</a>	Melt Pressure Transducer
<a href="#">ECHO-MV3-BAR-R20-UNF-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">PT462E.3.5CB-6/18-GC8</a>	Melt Pressure Transducer
<a href="#">MDA422.1/2.3.5C.15/46.GC8</a>	Melt Pressure Transducer
<a href="#">MDT422F-1/2-2C-15/16-B171-SIL2</a>	Melt Pressure Transducer
<a href="#">MDT462F-1/2 2C-15/45-A</a>	Melt Pressure Transducer
<a href="#">4622NA00B2OCEDDAAFZZGC6 / SN12-14-11403626</a>	Melt Pressure Transducer
<a href="#">MDT462F-1/2-3-5c-15/76-T80-GC9</a>	PRESSURE TRANSDUCERS
<a href="#">DYMT-S-1/2-J-10-15-G</a>	Melt Temperature Sensor
<a href="#">TMDT 462F-1/2-3.5C-15/91-A</a>	PRESSURE PROBE
<a href="#">2243 SA 25 M 14 CEFFACAPA</a>	Melt Pressure Transducer
<a href="#">MDA462-G3-5C-15/46</a>	Melt Pressure Transducer
<a href="#">MDA460-G3-5C-15</a>	Melt Pressure Transducer
<a href="#">VERT-MA4-MM1-HT1-BAR-R21-UNF-6PN-S06-F18-NTR-NCC</a>	pressure transmitter
<a href="#">DYMT-S-1/2-2XPT100/3-20-15-G-0.5M</a>	Melt Temperature Probe
<a href="#">14804100 S/N: 1090029 030 013</a>	Digital Pressure Indicator
<a href="#">VERT-MA4-MM1-NDCBAR-R22-UNF-6PN-S06-F18-NTR-NCC</a>	PRESSURE TRANSDUCER
<a href="#">ECHO-VT1-PSI-R23-UNF-6PN-S06-F18-NTR</a>	Pressure Sensor
<a href="#">DYMT-S-M18-J-5-15-G-2M</a>	Melt Temperature Sensor
<a href="#">UPR900-2-0-1-0-0-0-0</a>	Universal Pressure Indicator
<a href="#">SPX2281SDDCA4B30B</a>	Melt Pressure Transducer
<a href="#">ECHO-MV3-MPA-R21-6PN-S06-F18-NTR</a>	pressure sensor
<a href="#">TPT-463E-10M-12/18</a>	Pressure Sensors
<a href="#">PT4626-7.5M-6/18</a>	Pressure sensor
<a href="#">MDT462F-1/2-5C-15/46-B171-SIL2</a>	Melt Pressure Transducer
<a href="#">ECHO-PSI-VT1-R23-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">TPT463E-5M-6/18 RTD1</a>	Melt Pressure and Temperature Transmitter
<a href="#">NP422-1/2-10MPA-23/45</a>	PRESSURE SENSOR
<a href="#">mdt 462F-1/2-3.5C-15/46</a>	Melt Pressure Transducer
<a href="#">PT303-5C</a>	Pressure Transmitter
<a href="#">PT4624-7.5M-6/18-SIL2</a>	Melt Pressure Transducer
<a href="#">TPT4636-10M-6/18-B171</a>	Melt Pressure Transmitter
<a href="#">MDT462F-M18-35Mpa-32/46-SIL2</a>	Melt Pressure Transducer
<a href="#">MDT462F-5C-1/2-15/46-B171-SIL2</a>	pressure transducer
<a href="#">NP460-G3-35MPA-23</a>	pressure sensor
<a href="#">ECHO-MA4 BAR-R22-M18-6PN-S06</a>	Pressure Transmitter
<a href="#">CABLE8</a>	Sensor Extension Cable
<a href="#">CABLE10</a>	Sensor Extension Cable
<a href="#">CABLE15</a>	Sensor Extension Cable
<a href="#">E21911122</a>	Pressure Transmitter



Product	Description
<a href="#">IDA354-3.5C-2V-S78</a>	Melt Pressure Transducer
<a href="#">TPT4636.10M.6/18</a>	Melt Pressure Transmitter
<a href="#">TPT432A-5M-12/18</a>	PRESSUREM SENSOR
<a href="#">MDT422H-1/2-5C-15/46-B171-SIL2</a>	Melt Pressure Transducer
<a href="#">PT4626-10M-6/18-B628</a>	pressure trasnmittter
<a href="#">VT460-3</a>	PRESSURE TRANSMITTER CONNECTOR
<a href="#">PT4624-10M-6/18-SIL2</a>	PRESSURE TRANSDUCERS
<a href="#">ECHO-MA4-PSI-R21-UNF-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">929009</a>	Connector
<a href="#">148041000</a>	Panel Indicator
<a href="#">V462F31410</a>	Pressure Transducer
<a href="#">TPT463-5M-6/18</a>	Melt Pressure Transmitter
<a href="#">MDT460F-1/2-1M15SIL2</a>	mass pressure transmitter
<a href="#">4622NA00B14CEFFAAFZZ</a>	Melt Pressure Transducer
<a href="#">MDA460-1/2-3.5c-15</a>	Melt Pressure Transducer
<a href="#">SPX4 622 S A05 B 15 CE DD A AA ZZ</a>	Melt Pressure Transducer
<a href="#">PT462E-20MPA-6/30</a>	Melt Pressure Transducer
<a href="#">BP420 1/2 12 5M 6</a>	Burst Plugs
<a href="#">IDA 354-3.5C-5V</a>	Melt Pressure Transducer
<a href="#">ECHO-MV3-MPA-R20-6PN-S06-F12-NTR</a>	Pressure Transmitter
<a href="#">E22811131</a>	Pressure Transmitter
<a href="#">TDT463F-1/2-3.5C-15/46-SIL2</a>	Pressure Sensor
<a href="#">TDA463-1/2-7C-15/46-B170</a>	Sensor
<a href="#">ECHO-MV3-PSI-UNF-R23-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">MDT422F-1/-3.5C15/46-516-2</a>	Pressure Transmitter
<a href="#">VT460-5m</a>	Cable
<a href="#">MDA465XL-1/2-1M-B225 / 04650300642B225</a>	Melt Pressure Transducer
<a href="#">2291SA48K20BSMMAACZZ</a>	Melt Pressure Transducer
<a href="#">TPT4634-5C-12/30-SIL2</a>	Pressure Transducer
<a href="#">ECHO-MA4-BAR-R22-UNF-6PN-S06-F12-TC</a>	Pressure Transmitter
<a href="#">04620020130</a>	Melt Pressure Transducer
<a href="#">NP460-G3-50MPA-32 / 0460C11410</a>	Melt Pressure Transducer
<a href="#">PT4624-10M-12/30-SIL2</a>	Pressure Transducers
<a href="#">TDA463-M18-5C-15/46</a>	Melt Pressure and Temperature Transducer
<a href="#">MDT462L-1/2-7C-15/46</a>	Melt Pressure Transducer
<a href="#">BP1010</a>	Melt Pressure Gauge
<a href="#">224200002283</a>	Melt Pressure Transducer
<a href="#">MDT462F-1/2-2C-32/46-B171-SIL2</a>	Melt Pressure Transducer
<a href="#">MDA460.M18.5C.15</a>	PRESSURE MELT TRANSDUCER DYNISCO
<a href="#">MDT 462H-1/2-5C-15/46... 0-500 bar</a>	Melt Pressure Transducer
<a href="#">MDT 462L ½ 3.5C-15/46 0-350 bar</a>	Melt Pressure Transducer
<a href="#">MDA 462-1/2 -2C-15/46 ..0-200</a>	Melt Pressure Transducer
<a href="#">224200002104</a>	PRESSURE TRANSMITER
<a href="#">224200003156</a>	PRESSURE TRANSMITER
<a href="#">224200002845</a>	PRESSURE TRANSMITER



Product	Description
<a href="#">DYMT-S-1/2-RTD-10-15-G</a>	TEMPERATURE PROBE
<a href="#">PT460E-7.5M-6-T80</a>	Melt Pressure Transducer
<a href="#">PT4624-35MPA-18/18-SIL2</a>	Melt Pressure Transducer
<a href="#">MDA482-1/2-2C-15/46</a>	Melt Pressure Transducer
<a href="#">MDT462F-1/2-7C-15/46-B171-SIL2</a>	Melt Pressure Transducer
<a href="#">DYMT-S-M18-J-7-15-G-2M-A</a>	THERMOCOUPLE
<a href="#">BP420-1/2-6.5M-6</a>	Melt Pressure Transducer
<a href="#">BP420-1/2-3M-4</a>	Melt Pressure Transducer
<a href="#">BP420-1/2-3M-6</a>	Melt Pressure Transducer
<a href="#">902344</a>	Bursting screws
<a href="#">MDA462-M18-3.5C-32/46</a>	pressure transducer
<a href="#">DYMT-S-1/2-PT100/3-25-15</a>	TEMPERATURE SENSOR
<a href="#">PT4624-M18-35MPA-6/18-SIL2</a>	Melt Pressure Transducer
<a href="#">PT4626-50MPA-6/36</a>	Pressure Transducer
<a href="#">E12611121</a>	Pressure Transmitter
<a href="#">PT4624-5M-15/18-SIL2</a>	PRESSURE SENSOR
<a href="#">TDA463-1/2-3.5C-25/46-S137/1</a>	PRESSURE TRANSMITTER
<a href="#">4222SA00B21FEDDBAAZZ</a>	Pressure Transmitter
<a href="#">ECHO-MA4-MPA-R24-M22-6PN-S09-F18-TCK-N</a>	Pressure Transmitter
<a href="#">PT462XL-30M-6/18</a>	Melt Pressure Transducer
<a href="#">ECHO-MA4-MPA-R24-M22-6PN-S09-F18-TCK</a>	Pressure Transmitter
<a href="#">ECHO-MA4-BAR-R23-M18-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">929026</a>	Melt Pressure Transducer
<a href="#">TDA463-1/2-7C-15/46</a>	Melt Pressure and Temperature Transducer
<a href="#">1490-4-1</a>	Digital Process Indicator
<a href="#">ECHO-MV3-BAR -R22-UNF-6PN-S06-Tcj</a>	Pressure Transmitter
<a href="#">ECHO-MA4-BAR-R22-UNF-6PN-S06-F18-NTR</a>	Pressure Transmitter
<a href="#">1480-4-1</a>	Panel Process Indicator
<a href="#">MDT462F-M10-3.5C-7.6/107-SIL2</a>	Melt Pressure Transducer
<a href="#">SJ-600H-U4</a>	Melt Pressure Sensor
<a href="#">ECHO-MA4-BAR-R21-UNF-6PN-S06-F18-TCJ.</a>	Pressure Sensor/Transducer
<a href="#">ECHO-MA4-PSI-R21-UNF-6PN-S06-F18-TCJ</a>	melt pressure sensors
<a href="#">TPT4634-7CB-6/18</a>	Melt Pressure Transmitter
<a href="#">UPR90020111000</a>	Universal Pressure Indicator
<a href="#">PT-160-5M-H88</a>	PRESSURE TRANSDUCER
<a href="#">PT462E-10M-6/18-GC5</a>	Melt Pressure Transducer
<a href="#">462200000351</a>	Melt Pressure Transducer
<a href="#">462200000306</a>	Pressure Sensor
<a href="#">200100</a>	Mounting hole cleaning kit
<a href="#">711660</a>	Connector for Transducers
<a href="#">MDT420L-1/2-7C-15-J8</a>	pressure sensors
<a href="#">710700</a>	Pressure Transducer
<a href="#">PT462E-7.5M-6/30</a>	Melt Pressure Transducer
<a href="#">PT450TA 1M</a>	Melt Pressure Transmitter
<a href="#">PT462F-1/2-3.5C-15/46</a>	Melt Pressure Transmitter



Product	Description
<a href="#">PT4624-10MPA-12/18-SIL2</a>	Melt Pressure Transmitter
<a href="#">PT4626-5M-6/18 0-5.000</a>	PSIG PRESSURE SENSOR
<a href="#">ECHO-MV3-PSI-R22-UNF-6PN-S06-F30-T C</a>	Melt Pressure Sensor
<a href="#">TPT463E-7.5M-6/18</a>	Melt Pressure and Temperature Transducer
<a href="#">MDA422-1/2-1C-23/46</a>	Melt Pressure Transducer
<a href="#">PT124B-10M-M14-6/18-10V</a>	Pressure transmitter
<a href="#">ECHO-VT1-MPA-R22-UNF-6PN-S06-F18-TCJ</a>	Melt Pressure Sensor
<a href="#">PT462E-10M-6/18-GC7</a>	pressure transducer
<a href="#">PT462E-5M-6/18-GC7</a>	pressure transducer
<a href="#">ECHO-MV3-MPA-R23-UNF-6PN-S06-F18-NTR</a>	Melt Pressure Sensor
<a href="#">SPX2242SA00B21CEFFBACPK</a>	Melt Pressure Transmitter
<a href="#">TPT4634-3.5CB-6/18-SIL2</a>	PRESSURE TRANSDUCER
<a href="#">ECHO-VT1-BAR-R21-UNF-6PN-S06-F18-NTR</a>	PRESSURE TRANSDUCER WITH
<a href="#">MDT462F-1/2-7C-15/46-B171-A</a>	Melt Pressure Transmitter
<a href="#">MDT462F-M18-3.5C-8/46-B171-SIL2</a>	Pressure Sensor
<a href="#">MDT462N-1/2-2C-15/46-SIL2</a>	Pressure Sensor
<a href="#">ECHO-VT1-BAR-R22-UNF-6PN-S06-F18-TCJ</a>	PRESSURE PROBE
<a href="#">pt3034c</a>	Heavy Duty Pressure Transmitter
<a href="#">VERT-MV3-MM1-NDC-BAR-R22-UNF-6PN-S06-NFL-NTR-NCC</a>	Melt Pressure Sensor
<a href="#">462200000322</a>	Melt Pressure Transducer
<a href="#">ECHO-MA4-BAR-R23-UNF-6PN-S06-F18-TCJ</a>	Massedrucksensor
<a href="#">462F0152S</a>	sensor
<a href="#">PT415-5M-6-B314</a>	
<a href="#">MDT422F-M10-3.5C-15/46-SIL2</a>	Pressure transmitter
<a href="#">E21711122</a>	pressure transducer
<a href="#">ECHO-MA4-BAR-R22-UNF-6PN-S06-F18-TCJ</a>	
<a href="#">32581</a>	DIGITAL PRESSURE INDICATOR
<a href="#">BP240-1/2-9.5M-6</a>	
<a href="#">MDT-422F-1/2-2C-32/46-B-171A</a>	Sensor
<a href="#">NP463-1 2-3.5CK-1545-J</a>	PRESSURE AND TEMPERATURE SENSOR
<a href="#">BP420-1/2-3.5M-1.81</a>	RUPTURE DISC
<a href="#">DYMT-S-1/2-PT100/3-2.5-15-G</a>	
<a href="#">BP420123M12PROV</a>	
<a href="#">99880109</a>	
<a href="#">CB-05-(PT06A-10-6S(SR) )</a>	6 pin connector
<a href="#">TPT4634-1MB-6/18-SIL2</a>	PRESSURE TRANSDUCER (DOUBLE THERMOCOUPLE)
<a href="#">UPR900-3-0-1-0-0-1-0</a>	PROCESS INDICATOR
<a href="#">MDT462F-1/2-3.5C-7.6/46-SIL2</a>	
<a href="#">LMFI55-1NNNNNN</a>	Base model melt flow indexer
<a href="#">MDA460/420-1/2-5C-T80</a>	
<a href="#">2242NA00P20AWAABAHZZM1121</a>	SENSOR
<a href="#">PT422A-7.5M-6/18</a>	pressure sensor
<a href="#">MDT462FH-1/2-3.5C-15/46-SIL2</a>	
<a href="#">PT4624- 5 M-6/18-SIL2</a>	



Product	Description
<a href="#">D5000-TOOL</a>	MELT FLOW INDEXER
<a href="#">VT420</a>	Cable
<a href="#">ECHO-MA4-BAR-R21-M14-6PN-S06-F18-NTR</a>	
<a href="#">PT422A-35MPA-6/18-C16</a>	
<a href="#">PT160-4M-H11</a>	
<a href="#">MDT422F-1/2-3.5C-15/46-B171-SIL2</a>	
<a href="#">EMT462 2-1/2-3.5C-23/46</a>	
<a href="#">462200000019/4622SA00B21DPDDAAZZ</a>	
<a href="#">711610</a>	
<a href="#">DYMT-S-1/2-J-10-5-W-F13</a>	
<a href="#">PT375-1-30-M</a>	
<a href="#">TPT463E-5M-6/18 0-5000 PSIG</a>	
<a href="#">04600F01422</a>	
<a href="#">SPX-2242-E-A-00-B-22-CE-FF-B-CA-ZZ</a>	pressure transmitter
<a href="#">MDT422L-1/2-1C-15/46</a>	
<a href="#">04624300641GC7</a>	
<a href="#">TPT4634-50MPA-6/18-SIL2</a>	
<a href="#">DYMT-S-1/2-J-3-7.6-G-2MF13</a>	
<a href="#">PT460E-10M-6</a>	Melt Pressure Transducer, 0 to 10,000 psi, rigid stem
<a href="#">ECHO-VT1-BAR-R23-UNF-6PN-S06 F18-TCJ</a>	
<a href="#">2242EA00M21DPDDBCAZZ</a>	
<a href="#">2242EA00M14DPDDBCAZZ</a>	
<a href="#">4622NA00B20CEDDAAFZZGC7</a>	pressure transducer (melt pressure)
<a href="#">MDT460F-1/2-1C-15-SIL2</a>	Melt pressure transmitter
<a href="#">MDT462F-1/2-1C-15/46-SIL</a>	
<a href="#">PT465XL-2MB</a>	equipment
<a href="#">MDT462F-1/2-3.5C-15/76-T80-SIL2</a>	pressure sensor
<a href="#">PT4624-3M-6/60-SIL2</a>	
<a href="#">MDA462-1/2-1C-23/46</a>	Pressure transducer
<a href="#">SPX2281-E-B-D-CA-4-B-31-B</a>	Transmitter
<a href="#">LMI6000-2NENNNNN</a>	
<a href="#">LMI6000-1NENNCNN</a>	