



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## FRER

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">MCUU8</a>	Transducer docto
<a href="#">TAC005005K01</a>	
<a href="#">FRE TAT1013K0K05</a>	Power converter
<a href="#">MCOMV / E: 0-60V DC / A: 4-20mA DC</a>	Messwertumformer für Gleichspannung
<a href="#">MCOMV / E: 0-300V DC / A: 4-20mA DC old code. MCOVC1 new code</a>	Messwertumformer für Gleichspannung
<a href="#">MCOMV / E: 0-60mV DC / A: 4-20mA DC</a>	Messwertumformer für Gleichspannung
<a href="#">72E 250V(=F72EVX250)</a>	Rotary iron tension meter
<a href="#">B94M-B</a>	Display
<a href="#">TAC032100X05</a>	TRANSFORMER
<a href="#">CSEMIDMT830</a>	Energy counter
<a href="#">C70QTL005S4CAD</a>	Elektronischer MID-Energiezähler mit LCD-Display
<a href="#">F96EVX500XSD</a>	Digital Panel Meter
<a href="#">F96EVX180XCO</a>	96E Spannungswandleranschluss
<a href="#">TAC022150X05 (TAC22 150/5A)</a>	Stromwandler mit integrierter Klemmenabdeckung
<a href="#">TAC032250X05</a>	CURRENT TRANSFORMER
<a href="#">TAT1263K0X05 (TAT126 3000/5A)</a>	Stromwandler mit integrierter Klemmenabdeckung
<a href="#">TAT1285K0X05 (TAT128 5000/5A)</a>	current transformer
<a href="#">TTV020800VCO</a>	Niederspannungswandler inkl. Klemmenabdeckung
<a href="#">F96GS</a>	Synchronisierset
<a href="#">F96EAX5K0X05</a>	Dreheisenstrommesser für WA 5000/5A AC
<a href="#">CSEMIDMT831</a>	Energy counter
<a href="#">TAN0851K6P01O-1</a>	Taped current transformer for internal use
<a href="#">TAN0852K0P01O</a>	Taped current transformer for internal use
<a href="#">TAN0851K6P01O</a>	current transformer
<a href="#">TAN1203K0P01O</a>	current transformer
<a href="#">TAN1203K2P01O</a>	current transformer
<a href="#">X96MIC5M0XCQS</a>	Insulation meter
<a href="#">MCOFPXXXXA</a>	Current Transformer
<a href="#">MCORT3</a>	Three-Phase Power Transducer
<a href="#">MCORQ3 5A/4-20mA</a>	Current Transducer
<a href="#">TAC32 150/5A (TAC032150X05)</a>	Current Transformer
<a href="#">MCOEVQ</a>	Voltage Transducer
<a href="#">Q96D4</a>	Multifunction Network Analyzer
<a href="#">Q96B4W005MCQS</a>	
<a href="#">Q96B4W005ECQS</a>	Network analysers

Product	Description
<a href="#">Q96B4W005MCQL</a>	Digital Panel Meter
<a href="#">Q52P3H005MCQ2O</a>	Multifunctional built-in measuring instrument
<a href="#">MCUP0H.005 M C Q H O</a>	Digital Panel Meter
<a href="#">MCILAN485G32H</a>	Communication Interface Module
<a href="#">MCILAN485I32H</a>	Communication Interface Module
<a href="#">X48DS old code, new code X48DSA030X20S</a>	Earth Leakage Relay
<a href="#">TAC033500K05</a>	Stromwandler
<a href="#">MCOMV</a>	Messwertumformer für Gleichspannung
<a href="#">MCIUSB485</a>	Serial converter
<a href="#">MCOEAQ005X42S</a>	AC Current Transducer
<a href="#">TAT022050X05</a>	Stromwandler
<a href="#">TDC022</a>	Sensor
<a href="#">TDC032</a>	Toroidal Current Transformer
<a href="#">TDC035</a>	After. Diff relay. Type A-F
<a href="#">FRE TDC060</a>	Toroidal Current Transformer
<a href="#">TDC110</a>	Toroidal current transformer (closed type, round)
<a href="#">FRE TDC160</a>	Transformer
<a href="#">FRE TDC210</a>	Toroidal Current Transformer
<a href="#">TAT127 3000/5A (TAT1273K0L05)</a>	Current Transformer
<a href="#">MCOEAR (FTAR)</a>	AC Current Transducer
<a href="#">TAT0812K0X05</a>	
<a href="#">TTV0201K0XCO</a>	TRANSFORMER
<a href="#">TAT63 1600/5A (TAT0631K6X05)</a>	Stromwandler
<a href="#">TV6 (TTV006)(= TTV006500XCO)</a>	Low-voltage converter incl. terminal cover
<a href="#">TAC40 200/5A (TAC040200X05)</a>	Stromwandler mit integrierter Klemmenabdeckung
<a href="#">TAC40 250/5A (TAC040250X05)</a>	Stromwandler mit integrierter Klemmenabdeckung
<a href="#">96E 5A 5xIn (= F96EAX250C05)</a>	Dreheisenstrommesser für WA 250/5A AC
<a href="#">F96MVX010-800V-T</a>	Drehspulspannungsmesser
<a href="#">TAC017030X05</a>	CURRENT TRANSFORMER
<a href="#">MCOEVR</a>	AC Voltage Transducer
<a href="#">48E 250V</a>	Dreheisen Spannungsmesser für Wechselspannung
<a href="#">D98EVXXX3</a>	Digital Voltmeter
<a href="#">TAT127 4000/5A (TAT1274K0K05)</a>	protection transformer
<a href="#">FRE X52DS</a>	differential modulate relays
<a href="#">FRE TDC110</a>	Transformer for earth leakage relays
<a href="#">TAT 126.2K0 X 05</a>	Current transformer
<a href="#">X52DS</a>	KAÇAK AKIM KORUMA RÖLESİ (residual current protection relay)
<a href="#">TAT0631K0X05</a>	current transformers
<a href="#">TTV010400XCO</a>	VOLTAGE TRANSFORMER
<a href="#">F72EAX1K0C05</a>	Analog Ammeter
<a href="#">F72EVX540XCO</a>	Analog Voltmeter
<a href="#">96F2</a>	Double Pointer frequency meter
<a href="#">MCOFP (FTF)</a>	transducer
<a href="#">X35DL3030R102</a>	RELAY

Product	Description
<a href="#">old code TDP010200X05 / new code TDP102</a>	Differential Transformer Adapter
<a href="#">MCOVC160MX42H</a>	DC Voltage Converter
<a href="#">TAT1284K5X01</a>	current transformer
<a href="#">F96EAXNSCX05</a>	Ammeter
<a href="#">TAT128</a>	Current Transformer
<a href="#">TAT0822K5K05</a>	transformer
<a href="#">MCOEAQ 5A/4-20mA (FTAQ)</a>	Transducer for sinusoidal
<a href="#">MC2UP3PR0GXXH</a>	Universal Programmable Transducer
<a href="#">TAT1273K0L05</a>	Current Transformer
<a href="#">X98MS6PR0GXXS</a>	PANEL RELAY
<a href="#">TDC321</a>	Transformer
<a href="#">TDC177</a>	Transformer
<a href="#">X35DL3030B102</a>	earth leakage relays
<a href="#">TAT1273K0X05</a>	
<a href="#">MCOFP14COX20A</a>	Power Transducer
<a href="#">TAT1272K5L05</a>	current transformer
<a href="#">TAT1272K5X05</a>	current transformer
<a href="#">D96EA5PROGO5H</a>	Digital Panel Meter
<a href="#">D96EV5PROGCOH</a>	Digital Voltmeter
<a href="#">SEP45468</a>	INSULATOR
<a href="#">FRE D98MS6PROGXXL</a>	
<a href="#">MROAS1</a>	measuring transducer
<a href="#">MROVS1300X42L</a>	measuring transducer
<a href="#">MCOFP15D342L</a>	measuring transducer
<a href="#">D98EA5PROG05S</a>	Digital Panel Meter
<a href="#">TAT0821K5X05</a>	Current transformer
<a href="#">TAT0821K5K05</a>	Current Transformer
<a href="#">TAT1273K0K05</a>	Current Transformer
<a href="#">TDC350</a>	Transformer
<a href="#">D48MMAXX342</a>	Digital Panel Meter
<a href="#">Q96P3H005MCQ2</a>	MULTIMESS
<a href="#">TDP010500X05</a>	adapter transformer for differential currents
<a href="#">MCOWD15CON42H</a>	Power Transducer
<a href="#">MC2VC160MX42L</a>	transducer
<a href="#">Q72P3H005XCQHU</a>	Three-Phase Power Meter
<a href="#">TTV020400VCO</a>	Low voltage converters
<a href="#">X48DSX025X20H</a>	Compact Earth Leakage Relay
<a href="#">MROAS3005X42H</a>	Measurement Transducer
<a href="#">FRE TDC080</a>	Toroidal Transformer Ø80 for Earth Leakage Relays
<a href="#">X48DL3030B102</a>	earth leakage relays
<a href="#">MCOVS1250X42L</a>	Sinusoidal alternating voltage measurement transducers
<a href="#">TASC102X1-01 (1+1/1A)</a>	Current Transformer
<a href="#">TAC005080X01</a>	
<a href="#">UTTAG1065.1</a>	CURRENT CONVERTER
<a href="#">D96MA5PROG60S</a>	Digital Flush Measuring Instruments

Product	Description
<a href="#">TDA160</a>	TRANSFORMER
<a href="#">MCOVS1100X42H</a>	Sinusoidal Alternating Voltage Measurement Transducer
<a href="#">D94MSBCPCV42V</a>	Bar LED display instrument
<a href="#">D94MABCPCO42V</a>	Beam LED Indicator Tool
<a href="#">TDP102</a>	Transformer Adapter
<a href="#">TAT1272K0X05</a>	Current Transformer
<a href="#">TAT1274K0X05</a>	Current Transformer
<a href="#">TDP105</a>	Adapter transformer for differential currents
<a href="#">TAT129 6000/5A (TAT1296K0X05)</a>	Power transformers
<a href="#">MCOVS1150X42H</a>	Voltage Transducer
<a href="#">F48MAX150X60</a>	Analog Ammeter
<a href="#">F48MVX250XSD</a>	Analog Voltmeter
<a href="#">SSHMAX150X60</a>	Shunt Resistor
<a href="#">FRE TAT1284K0X05</a>	Current transformer
<a href="#">TAR1103K2N01O</a>	Current Transformer
<a href="#">TAR0851K2N01O</a>	Current Transformer
<a href="#">TAC040400X01</a>	Current Transformer
<a href="#">TAC40 800/1A (TAC040800X01)</a>	Current Transformer
<a href="#">TAT101800L01</a>	Current transformers 800/1A
<a href="#">TAC5 5/1A (TAC005005X01)</a>	winding current transformers
<a href="#">TAC005005X01</a>	winding current transformers
<a href="#">F48HXX565XD2</a>	Hour Counter
<a href="#">F96YFC</a>	DOUBLE FREQUENCYMETER
<a href="#">Q52P3L005X4C2</a>	NaNo 5 Multifunction Meter
<a href="#">TDC471</a>	Transformer
<a href="#">Q52D3L063X4C2</a>	Rail mounting energy analyzers
<a href="#">MCOAC1</a>	transducer
<a href="#">MC2UP3PROGXXH</a>	universal programmable transducer
<a href="#">MC2UP2PROGXXH</a>	Transducer
<a href="#">TAT127 (10P10)</a>	TRANSFORMER
<a href="#">X72DB34DCB112</a>	Earth Leakage Relay
<a href="#">TDB210003</a>	relay
<a href="#">52E 500V FEVX500XDS</a>	Voltmeter
<a href="#">F52FPX465XSQ</a>	Frequencymeter
<a href="#">TAT082K0J05</a>	High Accuracy Current Transformer
<a href="#">TAT82 2500/5A (TAT0822K5K05)</a>	Protection Class 5P5 Current Transformer
<a href="#">TAT82 2500/5A (TAT0822K5L05)</a>	Protection Class 5P10 Current Transformer
<a href="#">MCOVC1</a>	DC voltage converter
<a href="#">D94MSBCPCV0DV</a>	Digital Panel Meter
<a href="#">MCOVC1060X42H</a>	Voltage Transducer
<a href="#">MCOVC1060X42L</a>	Voltage Transducer
<a href="#">TAT128-5200-5</a>	current transformer
<a href="#">F96MSXYYX20</a>	rotary coil ammeter
<a href="#">TAT082800X05</a>	Current transformer
<a href="#">M52U04PROG5PH</a>	PROGRAM ANALOG OUTPUT UNIT

Product	Description
<a href="#">MCOAS1005X42H</a>	Transducer for sinusoidal alternating current
<a href="#">A96WT</a>	Digital Power Meter
<a href="#">TAT101</a>	Current Transformer
<a href="#">TTV050800VCO</a>	
<a href="#">TDP101</a>	Transformer Adapter For Current
<a href="#">F96YSC455XCO</a>	Analog Frequency Meter
<a href="#">F96MVX040XSD</a>	Analog Voltmeter
<a href="#">F96YVE</a>	Double Analog Voltmeter
<a href="#">F96YFE455XSQ</a>	Analog Frequency Meter
<a href="#">X48DSA030X20S</a>	Relay
<a href="#">TAC050300X05</a>	current transformer
<a href="#">MCUP0H005MCQHA</a>	Programmable Universal Transducer
<a href="#">TAC5 2/1A (TAC005002X01)</a>	winding current transformer
<a href="#">TAT1271K0X05</a>	Measuring Current Transformer
<a href="#">TAT1271K2X05</a>	127X55 1200/5A current transformer
<a href="#">TAT1271K5X05</a>	Measuring Current Transformer
<a href="#">MROAS1005X0DH</a>	Transducer
<a href="#">TAT1272K5K05</a>	current transformer
<a href="#">MCOEAR</a>	Transducer
<a href="#">MROVS1100X0DS</a>	Transducer
<a href="#">DP104</a>	Adapter transformer for differential currents
<a href="#">MAC022PROG42</a>	Current Transformer with integrated Transducer
<a href="#">D94MSBPCO42V</a>	bar led display instrument
<a href="#">TTV006500XCO</a>	low voltage transformer
<a href="#">F96EVX540XCO</a>	voltage converter connection
<a href="#">TDP010300X05</a>	adapter transformers
<a href="#">9SBMCTA</a>	COVER MORS.TRANSPARENT TA
<a href="#">X35DL3030R10H</a>	TOROID RELAY 80-260VAC/DC
<a href="#">X35DB34DCR102</a>	Relay
<a href="#">TDB090003</a>	Differential Relay Type B
<a href="#">TAC040400X05</a>	current transformer
<a href="#">TAT1014K0X05</a>	current transformer
<a href="#">X96MCC</a>	DC insulation meter
<a href="#">MCOAS1</a>	A.C. CURRENT CONVERTER
<a href="#">MCOVS1 / 4..20mA (=0-36KV) DC</a>	Transducer for sinusoidal AC voltage
<a href="#">M52U04XXXGXXH</a>	Programmable Analog Output Unit
<a href="#">Q15U2H005MCQSA</a>	Multifunctional Built-in Measuring Instrument
<a href="#">MC0AS1001X42H</a>	AC Current Transducer
<a href="#">TDA060</a>	TRANSFORMER
<a href="#">TDA110</a>	TRANSFORMER
<a href="#">TTV010500XCO</a>	Transformator
<a href="#">TTV050400VCO</a>	transformer
<a href="#">TTV1261K2VCO</a>	Voltage Transformer
<a href="#">TAT1658K0X05</a>	Current Transformer
<a href="#">X72DL3030R11H</a>	TIPOF RELAY

Product	Description
<a href="#">F72EAX500X01</a>	INDICATOR
<a href="#">MCOAS1001X42S</a>	CURRENT TRANSDUCER
<a href="#">A48EAX200X01</a>	Analog Ammeter
<a href="#">PN: F48HXX565XD2</a>	AC Hour Run Meter
<a href="#">CSEZMD405</a>	
<a href="#">ZCPXXXCACT</a>	UTF meter certificate
<a href="#">MCIZMDLTE</a>	Communication module
<a href="#">CSEEMHD21</a>	Static counter
<a href="#">MCIEMHLTE</a>	Communication module
<a href="#">TAC017030X01</a>	Current Transformer
<a href="#">TAC032100X01</a>	Current Transformer
<a href="#">TAC032060X01</a>	Current Transformer
<a href="#">TAT0631K5K01</a>	Current Transformer
<a href="#">F48EAX030X01</a>	Analog Ammeter
<a href="#">F48EAX060X01</a>	Analog Ammeter
<a href="#">TTV020400TCO</a>	VOLTAGE TRANSFORMER
<a href="#">F96EAX1K0C05</a>	Direct input 90° AC Ammeters
<a href="#">F72MVX1K0XCO</a>	Analog Voltmeter
<a href="#">UNC1-950-2676</a>	Current Transformer
<a href="#">TAA1623K0X05</a>	Cable conversion converter
<a href="#">Q96P3H005ECQ2</a>	Multifunctional built-in measuring instrument
<a href="#">FR96RD</a>	Reactive power meter
<a href="#">FR96WD</a>	Active power meter
<a href="#">Q96P3L005MCQ2</a>	Multifunctional built-in measuring instrument
<a href="#">X52DSX025X20S</a>	Relay
<a href="#">TDP104</a>	Transf. Adapter
<a href="#">TDP103</a>	Adapter Transformer
<a href="#">TDC110</a>	
<a href="#">F48EAX200X01</a>	Analog Ammeter
<a href="#">D98MS5PROG42S</a>	Digital Panel Meter
<a href="#">TTV006500XCO / TV6 (TTV006)</a>	low voltage converter
<a href="#">TAA1624K0X05</a>	Current Transformer
<a href="#">TAT022100X05</a>	CURRENT TRANSFORMER
<a href="#">Q52P3H005MCQLO</a>	NaNo 5H Network analysers
<a href="#">TAA1622K0X05</a>	current transformer
<a href="#">TTVO20400VCO</a>	low voltage converter
<a href="#">TAT1263K0X05</a>	CURRENT TRANSFORMER
<a href="#">Q52C3LX60M24H</a>	MULTIFUNCTION ANALYZER FOR DIRECT CURRENT LINES
<a href="#">F72FPX455XCO</a>	Pointer frequency meter
<a href="#">F72EAX200X05</a>	
<a href="#">F72EVX500XSD</a>	
<a href="#">L52ET3</a>	Voltage Selector Switch
<a href="#">F72WTXYYYXC1</a>	90° WATTMETERS AND VARMETERS WITH SEPARATE CONVERTER F...W/R
<a href="#">F72FPX455XSQ</a>	INDICATOR

Product	Description
<a href="#">F72WDXYYXQ5</a>	active power meter
<a href="#">F72EVX500</a>	Rotary iron voltage meter
<a href="#">TAT079400X01</a>	Current Transformer
<a href="#">MCOAS1001X42H</a>	AC Current Transducer
<a href="#">F96EVX500</a>	Rotary iron voltage meter
<a href="#">Q52P3H005MCQHA</a>	Multifunctional built-in measuring instrument
<a href="#">Q96P3H005GCQH</a>	Installation measuring instrument
<a href="#">F96EV</a>	Voltage converter connection
<a href="#">D96MV5600XS DL</a>	Digital built-in measuring instruments 96x96mm
<a href="#">FRE X35DL3030R10H</a>	Toroidal Relay
<a href="#">FRE TDA160</a>	Split Core Toroidal Transformer
<a href="#">FRE X35DL3030R10L</a>	Earth Leakage Relay
<a href="#">FRE TDC035</a>	Toroidal Transformer
<a href="#">Cod.TDC110</a>	Toroidal Transformer
<a href="#">Cod. TDC035</a>	Toroidal Transformer
<a href="#">Cod. TDC080</a>	Toroidal Transformer
<a href="#">TAC053600X05</a>	Current Transformer
<a href="#">MCIZMDETH</a>	Ethernet Communication Module
<a href="#">FRER TDP102</a>	Adapter transformers
<a href="#">96CE (96PY) / F96PY</a>	Analog Panel Meter
<a href="#">TTV010440XCO</a>	low voltage converter
<a href="#">SEP4041D</a>	HEXAGONAL INSULATORS
<a href="#">TASC106P5X05</a>	Transformer
<a href="#">FRER TDP104</a>	Collector Current Transformer
<a href="#">X35DL3030B102C</a>	RELAY
<a href="#">TAA0821K0X05</a>	Split-Core Current Transformer
<a href="#">TTV020600JCO</a>	Low Voltage Converter
<a href="#">TTV020600XCO</a>	Transformer
<a href="#">TAC005080X05</a>	Relay
<a href="#">F14GNCYYYVC5</a>	Synchronization group
<a href="#">48M 0-4-20mA 0-16 Mpa</a>	Pulsed pulse current meter
<a href="#">48M 0-4-20mA -315..0..315mm</a>	Pulsed pulse current meter
<a href="#">48M 0-4-20mA -1 kgf/cm<sup>2</sup></a>	Pulsed pulse current meter
<a href="#">D76RV5600XS DS</a>	Digital Panel Meter
<a href="#">D76RA5YYX05S</a>	Digital Panel Meter
<a href="#">D76 FP522CX5T S</a>	Digital Panel Meter
<a href="#">D76 FP522CXTS S</a>	Digital Panel Meter
<a href="#">D76MA5YYX60L</a>	Digital Panel Meter
<a href="#">D76MA5YYX60L (150A)</a>	Digital Panel Meter
<a href="#">D76 MV5200XS DL</a>	Digital Panel Meter
<a href="#">F48 EVX 600 XSD</a>	Analog Voltmeter
<a href="#">SSHMAX050X60</a>	Shunt Resistor
<a href="#">SSHMAX200X60</a>	Shunt Resistor
<a href="#">SSHMAX250X60</a>	Shunt Resistor
<a href="#">MCOVS1400X42H</a>	Voltage Transducer

Product	Description
<a href="#">X96MCC1M0X24L</a>	insulation meter with alarm
<a href="#">TDB060003</a>	trasf.relay is diff.
<a href="#">F72MIC5M0XCS</a>	AC INSULATION METER
<a href="#">Q96C3LX60M4CLA</a>	Digital Panel Meter
<a href="#">TAT0811K0S05</a>	Current Transformer
<a href="#">MCILAN485I01L</a>	Ethernet Communication Module
<a href="#">F72MMV025XSD</a>	Analog Voltmeter
<a href="#">F72EAX005XSD</a>	
<a href="#">F72MVX250XSD</a>	
<a href="#">F96EAX250D05</a>	Analog Ammeter
<a href="#">F96EAX040D05</a>	Analog Ammeter
<a href="#">F96EAX060D05</a>	Analog Ammeter
<a href="#">F96EAX800D05</a>	Analog Ammeter
<a href="#">C15UPL100X4CA</a>	Digital Panel Meter
<a href="#">TAC017060X01</a>	Primary Wound Measuring Current Transformer
<a href="#">TAC005020X01</a>	
<a href="#">TAT0822K5X05</a>	Measuring Current Transformer
<a href="#">TAT081800X05UL</a>	Measuring Current Transformer
<a href="#">MCOFP15COX42H</a>	Frequency Transducer
<a href="#">MCOVC1150X42H</a>	Voltage Transducer
<a href="#">MCOVS1300X42H</a>	Voltage Transducer
<a href="#">MC0UP2PR0G0MH</a>	Programmable Universal Transducer
<a href="#">TTV010690XCO</a>	Transformer
<a href="#">X35DB34DCM102C</a>	relay
<a href="#">F96EVX180XC1</a>	Analog Voltmeter
<a href="#">MCOAS1005X42S</a>	A.C CURRENT TRANSDUCER
<a href="#">MROAS1005X42S</a>	Rogowski Coil Current Sensor
<a href="#">MCOUP1PROGXXH</a>	
<a href="#">TAT061600X05</a>	Measuring Current Transformer
<a href="#">MCORD15CON42H</a>	Power Transducer
<a href="#">SEP25226</a>	Insulator
<a href="#">SEP35326</a>	Insulator
<a href="#">MCOVD3400X42H</a>	transducer
<a href="#">F96MIC5M0XCS</a>	Insulation meter with alarm contact
<a href="#">F72EVX650XCO</a>	Analog Voltmeter
<a href="#">D72MV5200XSDH</a>	Digital DC voltmeter
<a href="#">TTV010400VCO</a>	Voltage Transformer
<a href="#">TAA162 2000/5A</a>	cable conversion converter
<a href="#">96RD</a>	Digital Panel Meter
<a href="#">96WD</a>	Digital Panel Meter
<a href="#">72E 5A 1xIn FRER F72EAX030X05</a>	
<a href="#">72E 5A 1xIn FRER F72EAX040X05 Scale: 40/5A</a>	Analog AC Ammeter
<a href="#">72E 5A 1xIn FRER F72EAX040X05</a>	Analog AC Ammeter
<a href="#">72E 5A 1xIn FRER F72EAX050X05 Scale: 50/5A</a>	Analog AC Ammeter
<a href="#">72E 5A 1xIn FRER F72EAX050X05</a>	Analog AC Ammeter

Product	Description
<a href="#">72E 5A 1xIn FRER F72EAX080X05</a>	Analog AC Ammeter
<a href="#">72E 5A 1xIn</a>	Analog AC Ammeter
<a href="#">96T 1500/1800/1A 15min</a>	Analog AC Ammeter
<a href="#">F72MAXYYYYZ60</a>	Analog AC Ammeter
<a href="#">FRER F72MAXYYYYZ60</a>	Analog AC Ammeter
<a href="#">96E 500V</a>	Analog AC Voltmeter
<a href="#">L48ET3</a>	Volt Switch Panel
<a href="#">TAC021030X05</a>	Current Transformer
<a href="#">FRER TAC021050X05</a>	Current Transformer
<a href="#">FRER TAC021080X05</a>	Current Transformer
<a href="#">FRER TAT0821K6X01</a>	High Accuracy Current Transformer
<a href="#">TAC021050X05</a>	Measuring Current Transformer
<a href="#">TAC005040x01</a>	Measuring Current Transformer
<a href="#">TAC005060x01</a>	Measuring Current Transformer
<a href="#">MROVT3</a>	Measurement Transducer
<a href="#">X35DL3030H112</a>	Earth Leakage Relay
<a href="#">TAT1285K0L01</a>	Current Transformer
<a href="#">Q52D3H063M4C</a>	Multifunctional built-in measuring instrument
<a href="#">SEP20196</a>	Synchronizing Set
<a href="#">F96GSD</a>	Synchronizing Set
<a href="#">F72MAX025XCO</a>	Amp Switch Panel
<a href="#">L48EA</a>	AMP SWITCH. PANNELL
<a href="#">TV20 (TTV020)</a>	low voltage converter
<a href="#">D96EA5PROG05L</a>	Digital Programmable Ammeter
<a href="#">MAC017PROG42</a>	Programmable Current Transducer
<a href="#">MAC032PROG42</a>	Programmable Current Transducer
<a href="#">MAC040PROG42</a>	Programmable Current Transducer
<a href="#">TTV020800UCO</a>	Voltage Transformer
<a href="#">L48EV3</a>	VOLTMETER SELECTOR SWITCH
<a href="#">X52UL6030X60HC</a>	Earth Leakage Relay
<a href="#">F96YVC650XC0</a>	Analog Voltmeter
<a href="#">X96MIC 5MO X QSS</a>	AC Line Insulation Meter with Alarm
<a href="#">TAC022120X05</a>	Measuring Current Transformer
<a href="#">F72MAX025XSD</a>	Analog Voltmeter
<a href="#">F72MVX040XSD</a>	AC Line Insulation Meter with Alarm
<a href="#">X52UL6030R61H</a>	Measuring Current Transformer
<a href="#">X52UB64DCR61H</a>	Earth Leakage Relay
<a href="#">TDB028003</a>	trasf.relay is diff.
<a href="#">TDB0283CM</a>	Sensor
<a href="#">F96EAX1K5X05</a>	rotary iron flow meter
<a href="#">F96EVX400XSD</a>	rotary iron voltmeter
<a href="#">Q52P3H005XCQ2U</a>	Compact multifunction network analyser
<a href="#">TAT022150X05</a>	
<a href="#">TAC032200X05</a>	CURRENT TRANSFORMER
<a href="#">MCOUP3DCL</a>	Programmable Universal Transducer

Product	Description
<a href="#">Q96R3H100ICQLU4</a>	QUBO96HING. BY ROGOWSKI
<a href="#">TAT1275K0x01</a>	Measuring Current Transformer
<a href="#">F72EVX300XSD</a>	Analog Voltmeter
<a href="#">F48HXX455XD2</a>	HOUR METER
<a href="#">MCOUP4PROGXXL</a>	TRANSDUCER
<a href="#">F96EAX800D01</a>	Analog Ammeter
<a href="#">X48DL3030R10H</a>	F-type relay
<a href="#">X48DB34DCX11L</a>	Type B relay
<a href="#">TDB0603CM</a>	Tras.Rele Diff Type B
<a href="#">TDB0903CM</a>	Transfer Relay Diff type B
<a href="#">M52U04PROG5PS</a>	Programmable Analog Output Unit
<a href="#">MCOVT3500X4</a>	Voltage Transducer
<a href="#">A96EAX400X05</a>	Analog Ammeter
<a href="#">R TDP103</a>	TRANSF ADAPTER
<a href="#">F96EAXNSCC05</a>	Analog Ammeter without Scale
<a href="#">ZF96EAX400C05</a>	Analog Ammeter
<a href="#">C96UPL005X4CAD</a>	Programmable Energy meter with LCD
<a href="#">F72HXX455XD2</a>	Hours counter
<a href="#">A96EAX800X05</a>	Direct input 240° AC Ammeter
<a href="#">TAA1622K5X05</a>	
<a href="#">MCOUP1PROGXXL</a>	PROGRAMMABLE UNIVERSAL TRANSDUCER
<a href="#">F48EAX040D01</a>	
<a href="#">9SAMPP</a>	
<a href="#">A96MSXYYYYZ0D</a>	Analog ammeter
<a href="#">A96TPXYYYYZDY</a>	Analog speed measurement meter (tachometer)
<a href="#">MCOFP16COX42S</a>	
<a href="#">D96EA5PROG01H</a>	Programable digital meter
<a href="#">C96WDM005XCOAI</a>	
<a href="#">MCOWD114CN42H</a>	
<a href="#">MCOUP2PROGOMH</a>	
<a href="#">F72MAX040X60</a>	
<a href="#">F72MVX060XSD</a>	
<a href="#">TAT0642K5X05</a>	current transformer
<a href="#">TAC020500K01</a>	
<a href="#">Q52P3H005MCQ2</a>	Compact multifunction network analyser
<a href="#">FRER F96EAXYYYYX05</a>	
<a href="#">F48EAX250X05 / 48E 5A 1xIn</a>	
<a href="#">MCOFP1</a>	Measurement transducer for frequency
<a href="#">MCOFP154CX42S</a>	
<a href="#">TAT090800S05</a>	
<a href="#">TASC102P5X05</a>	Current Transformer
<a href="#">TDB160003</a>	TRASF.RELE
<a href="#">X48DL3030R102</a>	differential relay
<a href="#">X48DB34DCR10H</a>	RELAY
<a href="#">MCUP0H005MCQH</a>	

Product	Description
<a href="#">TAT050300Y05</a>	Transformer
<a href="#">MCOWT154CNZ4H</a>	
<a href="#">D48MV5600XSDL</a>	
<a href="#">MRC040PROG42</a>	
<a href="#">TAT81 1200/5A (TAT0811K2X05)</a>	
<a href="#">TAC032150x01</a>	
<a href="#">TAC032050x01</a>	
<a href="#">TTV020800XCO</a>	
<a href="#">F72EAX150X01</a>	
<a href="#">F72EAX050X01</a>	
<a href="#">TTV007230XCO</a>	
<a href="#">F72EVX180XCO</a>	
<a href="#">TAT101800X01XT</a>	
<a href="#">TAC032150X01XT</a>	
<a href="#">TAC032050X01XT</a>	
<a href="#">TTV020800XCOXT</a>	
<a href="#">F72EAX800X01N</a>	
<a href="#">F72EAX150X01N</a>	
<a href="#">F72EAX050X01N</a>	
<a href="#">TTV007230XCOXT</a>	
<a href="#">F72EVX300XSDN</a>	
<a href="#">F72EVX180XCON</a>	
<a href="#">Q96P3H005MCQH</a>	
<a href="#">F72EAX001XSD</a>	
<a href="#">F72MMV100XSD</a>	
<a href="#">MC2AS1001X42H</a>	
<a href="#">X48DSA030X20E</a>	
<a href="#">TAT1254K0X05</a>	
<a href="#">TAC040300X05</a>	
<a href="#">TAC040600X05</a>	
<a href="#">TAC020010X05</a>	CURRENT TRANSFORMER
<a href="#">TAT1011K5X05</a>	
<a href="#">TAC022080X05</a>	
<a href="#">MCOVS1 / 4..20mA (=0-6KV) DC</a>	Voltage transducer
<a href="#">TAT127 3000/5A (TAT1273K0X05)</a>	
<a href="#">MCOWD1 / 100/1A</a>	
<a href="#">MCOWD1 / 125/1A</a>	
<a href="#">MCOWD1 / 80-260V AC/DC</a>	
<a href="#">TAC051200X05</a>	
<a href="#">X48DL3030R10L</a>	
<a href="#">TAC005/00179</a>	
<a href="#">(TAC005005X05)</a>	YOUR PRIMARY MEASURE
<a href="#">MCOWD1</a>	
<a href="#">F72EAX100XSD</a>	rotary iron flow meter
<a href="#">TAA162 5000/5A (TAA1625K0X05)</a>	cable conversion converter

Product	Description
<a href="#">TAC32 400/5A(TAC032400X05)</a>	current transformer
<a href="#">TAT127 4000/5A (TAT1274K0L05) TAT1274K0L05W</a>	current transformer
<a href="#">F72EAX010X01</a>	
<a href="#">F72EAX060X01</a>	
<a href="#">F72EAX150X05</a>	
<a href="#">F72MAX050XCO</a>	
<a href="#">SSHMAX050XCO</a>	
<a href="#">F72MAX080X60</a>	
<a href="#">F72MMV150XSD</a>	
<a href="#">Q96P3H005MCQHU</a>	Multifunction network analyser + THU
<a href="#">MCOFP14COX42L</a>	
<a href="#">MCOVS1</a>	AC VOLTAGE CONVERTER
<a href="#">XAT0611K0XMO</a>	Relais
<a href="#">TTV007230KCO</a>	
<a href="#">TAT1011K5L05</a>	
<a href="#">MROAD1005X42L</a>	
<a href="#">MRC022PROG42</a>	
<a href="#">MROVS1</a>	
<a href="#">D72EA4PROG05S</a>	
<a href="#">9SAMPDC</a>	LOW FOOT
<a href="#">F96EAX200X05</a>	rotary iron flow meter
<a href="#">F96MSXYYYX42</a>	rotary pulse flow meter
<a href="#">X96MCC5M0XC1S</a>	
<a href="#">FRER D72EA4PROG01S</a>	
<a href="#">D72EA4025X01SX6</a>	
<a href="#">TAT0841K0X05</a>	
<a href="#">TAT0611K0X01</a>	
<a href="#">S1XMVX800XCO</a>	Voltage divider 800/100
<a href="#">TAT050150X05</a>	
<a href="#">TAC005100x05</a>	
<a href="#">TTV010690VCO</a>	
<a href="#">TDB110003</a>	transformer
<a href="#">X96EAMYYYX05S</a>	panel relay
<a href="#">F72PSX515XC1</a>	measuring device for power factor
<a href="#">X52UL6030R61HC</a>	
<a href="#">TAC032500S01</a>	current transformer
<a href="#">FRE TAT0811K5X05</a>	
<a href="#">TAT0811K5X05 (TAT81 1500/5A)</a>	
<a href="#">FRE MCOAS1001X42L</a>	AC current transducer
<a href="#">MCOAS3001X42H</a>	AC current transducer
<a href="#">FREQ72P3L005XCQ2</a>	
<a href="#">FRE D76MV5020XSDL</a>	digital panel voltmeter
<a href="#">D76EV4100XSD L</a>	
<a href="#">TAS0202P5X05</a>	Current transformer / TAS020 series 2-input
<a href="#">F48MAX030XSD</a>	Amperimeter (analog panel meter)

Product	Description
<a href="#">TTV007400XCO</a>	
<a href="#">FRE X52DSX025X20S</a>	Residual current relay
<a href="#">FRE X48DSA030X20S</a>	Residual current relay
<a href="#">FRE MCOVC1YYYY42H</a>	voltage transducer
<a href="#">D76MV5020XSDL</a>	
<a href="#">D76EV4230XSDL</a>	
<a href="#">Q52P3H005MCQ2A</a>	
<a href="#">TAT0822K0X05</a>	
<a href="#">TTV020400XCO</a>	potential transformer
<a href="#">SCP30104</a>	
<a href="#">SCP30104 (box)</a>	
<a href="#">TAC005100J05</a>	
<a href="#">TAC005100S05</a>	