



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Barbaros Mah. İhlamur Bul. AĞAOĞLU  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA,PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



MUNICIPIUL BUCUREŞTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Italweber Elettra

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">93TRMI600-49</a>	Transformer
<a href="#">OCM032050N003</a>	TRANSFORMER
<a href="#">OCM050080N004</a>	TRANSFORMER
<a href="#">CTOCM064100F347</a>	Single phase transformer
<a href="#">CTCFM005000805</a>	.
<a href="#">1465012</a>	Fus
<a href="#">CFM00200CC04-I</a>	Transformer
<a href="#">CTCB16001290000</a>	BIPOLAR SWITCH
<a href="#">IPB00040EE23</a>	Transformer
<a href="#">OCM032060P272</a>	Single phase transformer approved
<a href="#">CTOCM0250307516</a>	
<a href="#">92-TRMS250-20</a>	SAFETY MONOPHASE TRANSFORMER 250VA
<a href="#">CFM000631638</a>	
<a href="#">CTOCM0400709032</a>	Transformer
<a href="#">OCM025030P342</a>	Transformer
<a href="#">CTCTT0300602633</a>	3 Phase transformer
<a href="#">OTT0601204286</a>	Transformator
<a href="#">OAM0501000375</a>	Single phase auto-transformer
<a href="#">OCM0280403198</a>	
<a href="#">CTOCM032050P462</a>	Transformer
<a href="#">CFM00050CC10</a>	Single-phase transformer
<a href="#">OATC1001001131</a>	
<a href="#">CF00P152600411</a>	
<a href="#">CTOCM0400804032</a>	transformer
<a href="#">OCM0400804035</a>	
<a href="#">OCM0400804466</a>	
<a href="#">CTOCM0500803850</a>	
<a href="#">OCM0501003851</a>	
<a href="#">OCM0501003852</a>	
<a href="#">OCM050100L270</a>	
<a href="#">OCM050100R096</a>	
<a href="#">OCM0641004030</a>	
<a href="#">OCM064100M617</a>	
<a href="#">OCMC500804029</a>	
<a href="#">OCMC60060M487</a>	
<a href="#">CMS0400406689</a>	Single-phase safety transformer

Product	Description
<a href="#">OTTC1001000849</a>	
<a href="#">CCM040060M291</a>	
<a href="#">OCMC60070F348</a>	Trasf. OCM
<a href="#">OTT0400600252</a>	transformer
<a href="#">CTCFM00160CC09</a>	Transformer
<a href="#">OCM0500806890</a>	
<a href="#">CTOMX3206001226</a>	
<a href="#">2923310275L</a>	transformer
<a href="#">CTOCM0250300488</a>	single-phase transformer
<a href="#">OCM0320507652</a>	Transformer
<a href="#">OM X02202502052</a>	
<a href="#">0AM028300899</a>	Transformer
<a href="#">CFM001004048</a>	Transformer
<a href="#">CFM001K05708</a>	Transformer
<a href="#">CFM003K0L977</a>	Transformer
<a href="#">OCM0220309965</a>	
<a href="#">OTTC1001501042</a>	Three phase Control Transformers in box approved
<a href="#">OTTC1001721100</a>	Three phase Control Transformers in box approved
<a href="#">CTOCM040050N638</a>	electrical transformer
<a href="#">CTOCM050100M593</a>	transformer
<a href="#">CTCFM000302178</a>	
<a href="#">OMX02204001366</a>	
<a href="#">CFM001K29671</a>	
<a href="#">OCM040080P776</a>	Voltage transformer
<a href="#">CT OCM0250301024</a>	Transformer
<a href="#">CFM005201828</a>	
<a href="#">CTCFM001K0CC07</a>	Single phase Isolating Transformer
<a href="#">OMX03205002073</a>	
<a href="#">OMX05008002074</a>	
<a href="#">CFM006006516</a>	
<a href="#">OCM025030L536</a>	
<a href="#">CTOMT0320601988</a>	Transformer
<a href="#">OMX0220250AA07</a>	Isolation Transformer
<a href="#">CTABM005000015</a>	TRANSFORMER
<a href="#">Z90774002738</a>	transformer
<a href="#">CFM00500L892</a>	
<a href="#">CTOCM064150F582</a>	TRANSFORMER
<a href="#">OCMC60120P526</a>	TRANSFORMER
<a href="#">OCM064080F581</a>	TRANSFORMER
<a href="#">CFM00050L525</a>	Transformer
<a href="#">CFM00250CC08-I</a>	
<a href="#">FRIEND80-1T</a>	
<a href="#">CTOCM0500603048</a>	transformer
<a href="#">AFT005K02095</a>	Three phase Autotransformer
<a href="#">AFT001K52096</a>	Three phase Autotransformer

Product	Description
<a href="#">AFT002K32097</a>	Three phase Autotransformer
<a href="#">AFT003K02098</a>	Three phase Autotransformer
<a href="#">AFT005K02100</a>	Three phase Autotransformer
<a href="#">AFT010K02101</a>	Three phase Autotransformer
<a href="#">CFM006309626</a>	Single Phase Safety and insulating Transformer
<a href="#">OMT032040EE02</a>	
<a href="#">OCM040080N569</a>	
<a href="#">CTCFM001K6CC15</a>	TRANSFORMER
<a href="#">CFM00080M194</a>	TRANSFORMER
<a href="#">CFM00100H462</a>	
<a href="#">OMT0320602026</a>	
<a href="#">OCM0220306419</a>	transformer
<a href="#">OCM0500808178</a>	
<a href="#">OCM025030P415</a>	TRASFORMER
<a href="#">CFM00250N480</a>	Transformer
<a href="#">CTCSB20-00540</a>	Bipolar line switch
<a href="#">CFM00030H970</a>	transformer
<a href="#">CFM000458639</a>	
<a href="#">353/528027</a>	
<a href="#">IESFM00100CC04</a>	transformer
<a href="#">OMX03206001780</a>	Transformer
<a href="#">CCM040040F693</a>	Transformer
<a href="#">CTCCM050080F691</a>	Transformer
<a href="#">CTOCM032040F344</a>	TRANSFORMER
<a href="#">CTOCM064100F773</a>	APPROVED SINGLE-PHASE ISOLATION TRANSFORMER
<a href="#">OCM032060P660</a>	Transformer
<a href="#">OAT0601203038</a>	
<a href="#">CTCFM00150H732</a>	
<a href="#">OCM025030BB02</a>	
<a href="#">CTCFM002004902</a>	Transformer
<a href="#">777/ATT30K/027</a>	
<a href="#">OCM028030S269</a>	
<a href="#">CFM001006790</a>	
<a href="#">OCM032060BB02</a>	
<a href="#">91ATRM2K5-2</a>	
<a href="#">AFT012K51260</a>	
<a href="#">OCM064100S325</a>	
<a href="#">CFM00400CC15-I</a>	transformer
<a href="#">CFM001600610</a>	Trasforme
<a href="#">CFM00630L909</a>	
<a href="#">CFT002K05610</a>	
<a href="#">OCM0320605141</a>	
<a href="#">CTCFM001009418</a>	trasformatore
<a href="#">OCM032060R506</a>	
<a href="#">OAT0400751090</a>	AUTOTRANSFORMER

Product	Description
<a href="#">OCM0641003950</a>	TRANSFORMER
<a href="#">OTT0500801787</a>	THREE PHASE TRANSFORMER
<a href="#">91ATRM500-8</a>	
<a href="#">OCM040080L606</a>	
<a href="#">CBM001K6CC08</a>	
<a href="#">OCM0320508176</a>	
<a href="#">CFM003K78599</a>	
<a href="#">OCM040080N006</a>	SINGLE PHASE CONTROL TRASFORMER
<a href="#">SFM00063CC04</a>	
<a href="#">CFM00050BB02</a>	
<a href="#">OMX0500800CC07</a>	TV1 component
<a href="#">OMT0640642117</a>	transformer
<a href="#">OMX0500800CC02</a>	TV2 component
<a href="#">CTOCM0641002238</a>	
<a href="#">OIM000090050138</a>	
<a href="#">CMA001000010</a>	
<a href="#">CTOCM032050M266</a>	
<a href="#">CTCBM000250238</a>	
<a href="#">CFM000151340</a>	
<a href="#">0TA0230401630</a>	
<a href="#">CTOCM0501003030</a>	transformer
<a href="#">CTAFT003K0CC</a>	three-phase auto transformer
<a href="#">CTOMX2503501178</a>	
<a href="#">CTOCM032040S674</a>	
<a href="#">CTOMT0250302039</a>	
<a href="#">CTOMX0400500226</a>	SINGLE-PHASE SAFETY CONTROL TRANSFORMER
<a href="#">CTCIMAV1</a>	
<a href="#">CTOF000P1003018</a>	
<a href="#">CTOATC07K901190</a>	
<a href="#">CT371/TT6K/043</a>	
<a href="#">OCM064080F346</a>	TRANSFORMER
<a href="#">CT93TRMI2K5-4</a>	
<a href="#">CTOCM050080F345</a>	TRANSFORMER
<a href="#">CTOAM0250400978</a>	TRANSFORMER
<a href="#">CTCF3P150750959</a>	
<a href="#">CTIPB00100CC12</a>	Single-phase transformer
<a href="#">CTOCM032050N637</a>	
<a href="#">CTOCM028030S511</a>	
<a href="#">CTCFM001K0H733</a>	
<a href="#">CTOTT0600803273</a>	
<a href="#">CTSTCYBED190339</a>	
<a href="#">CT92TRMS063-39</a>	
<a href="#">CTCFM001808992</a>	TRANSFORMER
<a href="#">CTOATC500901849</a>	TRANSFORMER
<a href="#">CTOCMC70120R608</a>	

Product	Description
<a href="#">IW1421000</a>	FUSE
<a href="#">CTCFM001007148</a>	transformer
<a href="#">CTOCM050100M566</a>	transformer
<a href="#">CTCMS022030F166</a>	Transformer
<a href="#">CTOCMC60060M351</a>	
<a href="#">CTCFM003K07786</a>	
<a href="#">CTCF5P150600957</a>	
<a href="#">CTCF6P310370958</a>	
<a href="#">CTCF8P450400955</a>	
<a href="#">CTCF10P30300956</a>	
<a href="#">CTCCM0280408146</a>	transformer
<a href="#">CT353/528027 (CFM 50VA)</a>	transformer
<a href="#">CT353/528027 / CFM 50VA P=230/400V S=24V MAMMUT</a>	SINGLE PHASE SAFETY TRANSFORMER
<a href="#">CTAFT0115K0295</a>	
<a href="#">CT777/ATT30K003</a>	autotransformer
<a href="#">CTOAM0501000911</a>	
<a href="#">CTIM00260120114</a>	
<a href="#">CTOCMC60060P011</a>	
<a href="#">OCM040050N611</a>	
<a href="#">OMX04007001947</a>	
<a href="#">OCM0320400206</a>	
<a href="#">OIM000140050139</a>	electrical ballast
<a href="#">CTCCM005000341</a>	transformer
<a href="#">CTOCM032050R901</a>	transformer
<a href="#">CTOCM0400500434</a>	
<a href="#">CTOTT0701004121</a>	Three-phase transformer
<a href="#">OCM0320404893</a>	
<a href="#">OTT0400506252</a>	
<a href="#">CTOCMC50080M128</a>	transformer
<a href="#">CTCFM00060T242</a>	TRANSFORMER
<a href="#">CTCFM00100CC02-</a>	SINGLE-PHASE TRANSFORMER
<a href="#">CB16001290000</a>	
<a href="#">CTCFM00100CC04</a>	SINGLE-PHASE TRANSFORMER
<a href="#">CTOMX0220400108</a>	
<a href="#">OCM0500803850</a>	
<a href="#">CTCFM00400CC15</a>	
<a href="#">CBM00400CC09</a>	
<a href="#">92TRMS030-18</a>	
<a href="#">CTOCM0320606003</a>	
<a href="#">CTOCMC600601794</a>	
<a href="#">CTOMX0250403451</a>	Transformer
<a href="#">CFM006305279</a>	
<a href="#">CFM002004638</a>	
<a href="#">CTCFM001K06503</a>	
<a href="#">CTCFM001K0BB01</a>	transformer

Product	Description
<a href="#">CTCFM00450BB07</a>	transformer
<a href="#">CFM001K0CC15</a>	
<a href="#">OCM064150S562</a>	
<a href="#">CTOTT800801584</a>	
<a href="#">CTOTT0800803503</a>	
<a href="#">CTSTCTBED180313</a>	
<a href="#">CTKIT-STAB</a>	
<a href="#">CTAFM003000508</a>	
<a href="#">CTCBM000360755</a>	transformer
<a href="#">CTOMX2804001469</a>	Single-phase transformer
<a href="#">CTOCM022030T979</a>	Primary Transformer
<a href="#">PN CTCFM00500CC07</a>	TRANSFORMER
<a href="#">CTCFM00100CC04-I</a>	Transformer
<a href="#">CTOTT0300503990</a>	
<a href="#">CT353/528048</a>	
<a href="#">CTOCM0400601674</a>	Transformer
<a href="#">CTOCM050080M409</a>	
<a href="#">CTCFM002K03589</a>	Voltage Transformer
<a href="#">CTOCM040070S309</a>	mono phase transformer
<a href="#">CTCFM00100L340</a>	control transformer
<a href="#">CTCFM004001742</a>	
<a href="#">CTCFM000631754</a>	
<a href="#">CTOCM064130CC11</a>	
<a href="#">CTAFT006K32719</a>	transformer
<a href="#">CTCFM001008004</a>	Power Supply Transformer
<a href="#">CTCS20-00540</a>	Bipolar line switch
<a href="#">IP44 610X460X720 R</a>	HOMOLOG CASE. HOME
<a href="#">IP44 450X360X620 R</a>	HOMOLOG CASE.
<a href="#">CTOCM050060F718</a>	
<a href="#">OCM0500809553</a>	
<a href="#">CTCFM00100CC12</a>	
<a href="#">CTCFM001504039</a>	
<a href="#">CTOTT0601202717</a>	
<a href="#">CTCFM00500CC15-</a>	
<a href="#">CTOTT0700805762</a>	
<a href="#">CFM00050CC04-I</a>	
<a href="#">CTCFM001502212</a>	
<a href="#">CTOCM032050M723</a>	
<a href="#">CTOIM0000900501138</a>	Single-Phase Inductor
<a href="#">CTOIM0090050138</a>	Single Phase Inductor
<a href="#">CFM001K5M085</a>	
<a href="#">CTCFM001K03778</a>	
<a href="#">CTCFM001K53670</a>	
<a href="#">CTCFM001K61495</a>	
<a href="#">CTCFM002500929</a>	

Product	Description
<a href="#"><u>CTCFM002K00641</u></a>	
<a href="#"><u>CTCFM003001548</u></a>	
<a href="#"><u>CTCFM003K05553</u></a>	
<a href="#"><u>CTCFM004K0CC07</u></a>	
<a href="#"><u>CTCFM007502995</u></a>	
<a href="#"><u>CTCFM008007704</u></a>	
<a href="#"><u>CTCFM002K57706</u></a>	
<a href="#"><u>CTAFT0120K3601</u></a>	
<a href="#"><u>CTCFM001001247</u></a>	transformer
<a href="#"><u>CTCFM003001833</u></a>	
<a href="#"><u>CTCFM00200CC04-</u></a>	transformer
<a href="#"><u>OC050060L056</u></a>	Transformer
<a href="#"><u>CFT045K07163</u></a>	transformer
<a href="#"><u>CTCFT045K07163</u></a>	transformer
<a href="#"><u>CT353/528027</u></a>	transformer
<a href="#"><u>CTALFA2000BPUB</u></a>	FILTER GROUP
<a href="#"><u>CTOCM0501003165</u></a>	
<a href="#"><u>CTCFM00300P789</u></a>	
<a href="#"><u>CTOAM0400801004</u></a>	
<a href="#"><u>CTOCM0640802704</u></a>	Monophase Transformer
<a href="#"><u>CTAFM006000666</u></a>	Fuel Injection Air Flow Meter
<a href="#"><u>CTCFM00500H164</u></a>	transformer
<a href="#"><u>CTOAT0800802647</u></a>	autotransformer
<a href="#"><u>CTOAT0230401630</u></a>	3 phase transformer
<a href="#"><u>CTCFM00035N017</u></a>	
<a href="#"><u>CTCBM00050CC04</u></a>	
<a href="#"><u>CTOMX2504001141</u></a>	
<a href="#"><u>OCM050070L764</u></a>	TRANSFORMER
<a href="#"><u>CT93TRMI350-14</u></a>	
<a href="#"><u>OCM064100C007</u></a>	
<a href="#"><u>CTOCM0501004275</u></a>	
<a href="#"><u>303/TMJ30/001</u></a>	
<a href="#"><u>OMX02203002695</u></a>	
<a href="#"><u>CFM00500N129</u></a>	
<a href="#"><u>CTCCM001000065</u></a>	
<a href="#"><u>OAM0400500030</u></a>	
<a href="#"><u>353/TMJ200/005</u></a>	panel transformer
<a href="#"><u>CTCFM001K2R468</u></a>	
<a href="#"><u>CTCFM00500CC07</u></a>	transformer
<a href="#"><u>CTCFM00160CC02</u></a>	transformer
<a href="#"><u>CTOCMC601209080</u></a>	
<a href="#"><u>92TRMS200-62</u></a>	
<a href="#"><u>CTOTT0500706671</u></a>	Transformer
<a href="#"><u>CFM00040CC04</u></a>	
<a href="#"><u>CTCBM005K00630</u></a>	

Product	Description
<a href="#"><u>PN CTCFM00160CC02</u></a>	transformer
<a href="#"><u>CTOMX0250400114</u></a>	
<a href="#"><u>CTOCM0220308881</u></a>	
<a href="#"><u>CFM001K61495</u></a>	
<a href="#"><u>CTOCM050070R028</u></a>	
<a href="#"><u>CTOCM0220308862</u></a>	
<a href="#"><u>CTOCM040060T171</u></a>	
<a href="#"><u>CTCFM003K0CC15</u></a>	
<a href="#"><u>OCM050060M727</u></a>	
<a href="#"><u>CTCFM001K6V062</u></a>	
<a href="#"><u>CTCFM00300CC04</u></a>	SINGLE-PHASE TRANSFORMER
<a href="#"><u>CTCFM001002015</u></a>	