



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Ağaoğlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

# Megacon

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

## BRAND'S PRODUCTS

Product	Description
<a href="#">AVH60 115-230 / 596120</a>	Display model : AVH60
<a href="#">AN7B</a>	adapter
<a href="#">ELR-3F 24-48 VAC/DC (604055)</a>	Earth-leakage protection relay
<a href="#">ELU96N3</a>	EARTH FAULT INDICATOR
<a href="#">KEC115F</a>	
<a href="#">KPM13M173E</a>	Active power guards
<a href="#">KPM13M173E / 60231</a>	LEVEL CONTROLLER
<a href="#">KPM161E2 Aux V: --/--V AC</a>	Insulation guard up to 500V, 0-1Mohm, non-latching relays
<a href="#">KPM161E2 (24VDC)</a>	voltage supply
<a href="#">KPM161E2</a>	MULTIPARAMETER METER
<a href="#">KPM163FQ</a>	converter
<a href="#">KPM169GK12</a>	DC insulation guard
<a href="#">KPM169GK4 200/240V</a>	Insulation Monitor
<a href="#">KPM169GK8 AC Aux</a>	Insulation Monitor
<a href="#">KPM169GL2</a>	DC insulation guard
<a href="#">KPM169GL4</a>	
<a href="#">KPW171C</a>	
<a href="#">KRM169E</a>	DC insulation relay
<a href="#">KRV43B</a>	Relay
<a href="#">KSP34E2</a>	Phase monitoring guard
<a href="#">MC2W3C</a>	Active power transducer
<a href="#">MC2W3C2</a>	Active power transducer
<a href="#">MCE105D</a>	Generator Controller
<a href="#">KPM169E</a>	DC insulation guard
<a href="#">KPM162E AC aux. voltage supply</a>	Automatic Earth Fault Guard.
<a href="#">KPM162E Price – 24V.DC aux voltage supply</a>	Automatic Earth Fault Guard.
<a href="#">IGT60</a>	Residual Current Transformers
<a href="#">IGT-110</a>	Residual Current Transformer
<a href="#">MCFB2</a>	Frequency transducer
<a href="#">596121 / AVH60</a>	Electrical multifunction meter
<a href="#">Art.Nr.604030 ELR-3C</a>	
<a href="#">Art.Nr.604032 ELR-3C</a>	
<a href="#">604030</a>	
<a href="#">KPM161E2 (12-24V DC)</a>	Insulation guard up to 500V, 0-1Mohm, non-latching relays
<a href="#">KPM161E2 (124V DC)</a>	Insulation guard up to 500V, 0-1Mohm, non-latching

Product	Description
<a href="#">KPW181E</a>	
<a href="#">KPW176A/G</a>	
<a href="#">KPW171C/G</a>	
<a href="#">KPFV53D</a>	
<a href="#">KPW171C / 1500:5A</a>	3-PHASE GENERATOR REVERSE POWER AND OVERLOAD GUARD
<a href="#">KPW171C / 3000:5A</a>	3-PHASE GENERATOR REVERSE POWER AND OVERLOAD GUARD
<a href="#">KPFV54C</a>	THREE PHASE - 4-WIRE FREQUENCY AND VOLTAGE GUARD
<a href="#">KPFV54C ( Supply: 24V DC)</a>	
<a href="#">KPFV54C (Supply: 110V DC)</a>	
<a href="#">KPFV54C (200/240V)</a>	THREE PHASE - 4-WIRE FREQUENCY AND VOLTAGE GUARD
<a href="#">KPFV51E</a>	
<a href="#">KPFV53C</a>	Three Fase/3 Wire Frecuency and Voltage Guard.
<a href="#">MXR845CI / AC</a>	Electronic potentiometer
<a href="#">MXR845CI</a>	Electronic potentiometer
<a href="#">KPM13M173E (Aux V: 200/240V)</a>	Relay
<a href="#">KSQ331E2</a>	Sector check synchroniser relay, semi-automatic
<a href="#">KPM163FQ (12-48V DC)</a>	
<a href="#">KPM163FQ (110V DC)</a>	
<a href="#">KPM161E2 Aux V: 12-48V DC</a>	non-latching relays
<a href="#">KPM161E2 Aux V: 110V DC</a>	non-latching relays
<a href="#">596121 / AVH60 24 VDC 50-60Hz</a>	
<a href="#">ELR-3C Aux.V - 110/230/400V AC</a>	Earth Fault Relay
<a href="#">ELR-3C Aux.V - 24-48V AC/DC.</a>	Earth Fault Relay
<a href="#">MCVB1</a>	Single phase voltage transducer
<a href="#">KPM165H/HG (AC Aux)</a>	
<a href="#">KPM165H/HG (12-24V DC Aux)</a>	
<a href="#">KPM165H/HG (110V DC Aux)</a>	
<a href="#">KPM165HF/HGF (AC Aux)</a>	
<a href="#">KPM165HF/HGF (12-24V DC Aux)</a>	
<a href="#">KPM165HF/HGF (110V DC Aux)</a>	
<a href="#">KPM165G1/L1 (AC Aux)</a>	
<a href="#">KPM165G1/L1 (12-24V DC Aux)</a>	
<a href="#">KPM165G1/L1 (110V DC Aux)</a>	
<a href="#">KPM165GF1/LF1 (AC Aux)</a>	
<a href="#">KPM165GF1/LF1 (12-24V DC Aux)</a>	
<a href="#">KPM165GF1/LF1 (110V DC Aux)</a>	
<a href="#">KPM165E1 (AC Aux)</a>	
<a href="#">KPM165E1 (12-24V DC Aux)</a>	
<a href="#">KPM165E1 (110V DC Aux)</a>	
<a href="#">KPM165F1 (AC Aux)</a>	
<a href="#">KPM165F1 (12-24V DC Aux)</a>	
<a href="#">KPM165F1 (110V DC Aux)</a>	
<a href="#">KPM165N1 (AC Aux)</a>	
<a href="#">KPM165N1 (12-24V DC Aux)</a>	
<a href="#">KPM165N1 (110V DC Aux)</a>	

Product	Description
<a href="#">KPM165NF1 (AC Aux)</a>	
<a href="#">KPM165NF1 (12-24V DC Aux)</a>	
<a href="#">KPM165NF1 (110V DC Aux)</a>	
<a href="#">AN14B</a>	
<a href="#">ELR-3F (604038)</a>	Earth leakage relay, Din Rail Mounting version
<a href="#">ELR-3C009010000</a>	Earth Leakage Relay
<a href="#">ELR-3C009020000</a>	EARTH LEAKAGE RELAY
<a href="#">KPM161E2 (Aux Supply: 440/460V)</a>	non-latching relays
<a href="#">KPW171C 168645</a>	
<a href="#">670103</a>	ISO-4, AUX:85-230VAC
<a href="#">601303</a>	GB70 TRANSFORMER, Ø:70mm
<a href="#">601304</a>	GB120 TRANSFORMER, Ø:120mm
<a href="#">596120</a>	
<a href="#">KPM13XE-D48</a>	KPM13V15E, 48VDC, DC VOLT GUARD
<a href="#">KPM13M173E as serial 162288</a>	relay, non-latching overload relay
<a href="#">ELR-3C 110 VAC/DC 220-400 VAC / 604030</a>	
<a href="#">MXR845CI2 AC aux</a>	potentionmeter
<a href="#">Scale/Label for KPM13M173E</a>	
<a href="#">648080 ( EMA11H 5A ) + 648038 ( 4AO-02 )</a>	Kombi-instrument with circuit board
<a href="#">KPM13V15E</a>	ANALOGUE GUARD / CONTROLLER
<a href="#">KPM13V15E 24/48 DC</a>	DC LOW/HIGH voltage guard,
<a href="#">KPM13V15E 110V DC Aux</a>	DC LOW/HIGH voltage guard
<a href="#">KPM163E</a>	ground fault monitor
<a href="#">CH163-3.6</a>	ground fault monitor hv adapter
<a href="#">601302</a>	GB35 TRANSFORMER, Ø:35mm
<a href="#">MC2W3DX-SA-AUX</a>	MC2W3DB-SA, Aux:440-460V, I/P:440V, 150/5A
<a href="#">MXR845CI2</a>	Electronic potentiometer
<a href="#">MCFB4A</a>	
<a href="#">KPW171C 200-240V</a>	KW Meter
<a href="#">KRM161B-24VDC</a>	isolated ac insulation relay
<a href="#">KSQ331G2/110VDC</a>	
<a href="#">MCFB4X-D24</a>	
<a href="#">KEC115F - 200-240V</a>	
<a href="#">596120 / AVH60 115-230 V AC</a>	Jumbo voltage display
<a href="#">KPM163F (12-24V DC)</a>	
<a href="#">KPM169GL8</a>	DC insulation guard
<a href="#">KPM169K8</a>	DC insulation guard
<a href="#">MC2W3DA-SD</a>	
<a href="#">Configuration for KEC115F - 200-240V</a>	
<a href="#">KPC112 24VDC</a>	
<a href="#">KPC112E with analogue output</a>	
<a href="#">KSP34E2 (0-600V)</a>	Phase monitoring guard
<a href="#">KPM169L4N</a>	Isolation monitor

Product	Description
<a href="#">RH4</a>	High voltage DC adaptor for KPM169x
<a href="#">Bracket for IGT60mm</a>	
<a href="#">MML1503C</a>	Impedance unit
<a href="#">596121 / AVH60 24V</a>	Jumbo voltage display
<a href="#">KPM169GK4 AC Aux</a>	
<a href="#">IMA315</a>	three phase power simulator
<a href="#">KPM163F</a>	Automatic Insulation Guard
<a href="#">KPM165HF</a>	
<a href="#">CH163-5.0</a>	adapter
<a href="#">KEC115E</a>	3 Phase Over Current & Short Circuit VATOR (Variable Time Overcurrent Release) Guard
<a href="#">KPF221</a>	HZ-METER
<a href="#">KEV233E (380-415V)</a>	
<a href="#">KPC112E</a>	
<a href="#">604038</a>	
<a href="#">SL96C</a>	
<a href="#">REDUR6W03</a>	Winding current transformer
<a href="#">KPM162E</a>	
<a href="#">DQ962R3E</a>	kVAr meter
<a href="#">KSQ104F2 AC aux</a>	"Spot-on" synchroniser
<a href="#">KSQ104G2 AC aux</a>	"Spot-on" synchroniser
<a href="#">KSQ104G2 24Vdc</a>	"Spot-on" synchroniser
<a href="#">KSQ104G2 110Vdc</a>	"Spot-on" synchroniser
<a href="#">KSQ104G2 220Vdc</a>	"Spot-on" synchroniser
<a href="#">ELR-3C 110VAC</a>	
<a href="#">KPM163F AC TBC</a>	
<a href="#">KEC115F 380-415V</a>	
<a href="#">MXR845CI2 24DC</a>	Electronic potentiometer
<a href="#">KPW176A (Scale 300-0-3000kW)</a>	3-phase 3-wire Reverse and overload guard with analogue output
<a href="#">KPW176A (Scale 260-0-2600kW)</a>	3-phase 3-wire Reverse and overload guard with analogue output
<a href="#">AVH60 / 596120</a>	
<a href="#">ELR-3F110/400V (604038)</a>	GROUND FAULT RELAY
<a href="#">KSP34E2-04</a>	
<a href="#">KPF221F</a>	LOW/HIGH frequency guard, non-latching relays, F-version also include an analogue
<a href="#">KCM162FB</a>	Single channel earth current guard
<a href="#">IGT-30MM</a>	Residual Current Transformers for earth fault measurement
<a href="#">KPM162G</a>	Single channel earth current guard, latching relays
<a href="#">RH8</a>	DC adapter
<a href="#">KEV233E (440-460V)</a>	
<a href="#">ISOPAK112</a>	Earth fault AC current
<a href="#">ISOPAK112w</a>	Earth fault AC current
<a href="#">IGT12</a>	
<a href="#">IGT30</a>	
<a href="#">IGT60A</a>	

Product	Description
<a href="#">Tore IGT110</a>	
<a href="#">KCQ332EJD12 (AC aux)</a>	Check synchroniser & bus/generator coupler
<a href="#">KSQ332EJD12</a>	Sector check synchroniser & bus/generator coupler, semi-automatic
<a href="#">MCVB3A</a>	
<a href="#">670424</a>	
<a href="#">601307</a>	
<a href="#">601306</a>	
<a href="#">670497</a>	
<a href="#">670500</a>	
<a href="#">AVH60/596121 (24vdc/ac)</a>	VOLTMETER
<a href="#">KPM163F 100kohm</a>	non-latching relays, analogue output signal
<a href="#">ISOVIEW100</a>	Front display
<a href="#">EMA11NH</a>	Parser
<a href="#">EAM11NH</a>	
<a href="#">KPW171C (20-0-200 KW)</a>	
<a href="#">KPM161E2 (200-240V)</a>	Insulation guard up to 500V
<a href="#">KSQ104F2</a>	Automatic Synchroniser
<a href="#">KRM161BS 110V</a>	Insulation relay
<a href="#">KPF221E</a>	
<a href="#">KPW174C</a>	
<a href="#">XCRJ.CABLE.RJ12</a>	
<a href="#">IGR2015</a>	
<a href="#">596121 / AVH60 (1000V)</a>	
<a href="#">IMA15</a>	power test simulator
<a href="#">KCQ104F2</a>	
<a href="#">KPW171C 480V</a>	
<a href="#">CH163/3.6kV</a>	adaptor
<a href="#">KPW177A2</a>	
<a href="#">601033 / CT-1/110 for ELR</a>	TRANSFORMER
<a href="#">KEC115F AC aux</a>	
<a href="#">KEC115F 24/48DC</a>	
<a href="#">KEC115F 110/220DC</a>	
<a href="#">KPM162E AC aux</a>	
<a href="#">KPM162E 24DC</a>	
<a href="#">KPM162E 110/220VDC</a>	
<a href="#">ELR-3C 24/48V</a>	
<a href="#">MC2W3D</a>	
<a href="#">KEV233X-AC</a>	
<a href="#">KSQ332EJD22 / 220V</a>	Bus coupler, semi-automatic
<a href="#">MECE-DC24/ -600V o/p 4-20mA</a>	
<a href="#">MECE-DC24/ 0-3.5/7kA</a>	
<a href="#">MECE-DC24/ 0-400/800A</a>	
<a href="#">MECE-DC24/ 0-600/1200A</a>	
<a href="#">MECE-DC24/ 0-250/500A</a>	
<a href="#">KPM161E2 (85-300VDC)</a>	

Product	Description
<a href="#">KPM161E2/G</a>	Panel instruments
<a href="#">KPM161F/GE</a>	Panel instruments
<a href="#">KPM163F AC+O/P</a>	Insulation guard
<a href="#">KPM163F 24DC +O/P</a>	Insulation guard
<a href="#">KPM163F 110VDC +O/P</a>	Insulation guard
<a href="#">KPM161M (AC Aux)</a>	
<a href="#">KPM161M (24V DC)</a>	
<a href="#">KPM161M (110V DC)</a>	
<a href="#">MEVE - 24VDC</a>	Voltage Transdutor
<a href="#">MECE (STANDARD TYPE)</a>	Current Transducers
<a href="#">MECE - 24VDC / 0-200A</a>	Ampermeter Megacon
<a href="#">KSQ333E2</a>	
<a href="#">KSQ332E2</a>	
<a href="#">KPM13C123F AC+O/P</a>	ANALOGUE GUARD / LEVEL CONTROLLER
<a href="#">KPM13C123F 24/48DC+O/P</a>	ANALOGUE GUARD / LEVEL CONTROLLER
<a href="#">KPM13C123F 110/220VDC</a>	ANALOGUE GUARD / LEVEL CONTROLLER
<a href="#">RH12</a>	HIGH VOLTAGE DC ADAPTOR
<a href="#">KPM169K12 AC aux</a>	BIPOLAR INSULATION GUARD
<a href="#">KPM169K12 24DC</a>	BIPOLAR INSULATION GUARD
<a href="#">KPM169K12 110VDC</a>	BIPOLAR INSULATION GUARD
<a href="#">ELD350</a>	DETECTOR
<a href="#">KPM161M / 200-240V</a>	
<a href="#">KPM161N : 24V DC</a>	
<a href="#">BZW48/2E 230V</a>	Hourmeter
<a href="#">KPM169E Isoguard 100kohm</a>	
<a href="#">KCQ332EJD12 24 V DC</a>	
<a href="#">KCQ332EJD12 36-160V</a>	
<a href="#">596121</a>	