



ENAPART



93 S Railroad Avenue Unit C
Bergenfield NJ 07621 USA
www.enapart.com
sales@enapart.com



Via del Canneto 35,
Borgosatollo, Brescia - Italia
www.enapart.it
vendite@enapart.it



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu
My Newwork No:3/15 Ataşehir / İstanbul
www.enapart.net
satis@enapart.net



PRIVADA 10 B SUR #3908 COL.
ANZUREZ, C.P. 72530, PUEBLA, PUE
www.enapart.com.mx
sales@enapart.com.mx



Friedrich-Ebert-Anlage 36, 60325
Frankfurt am Main, Germany
www.enapart.de
anfrage@enapart.de



4 boulevard Carnot, 95400
villiers-le-bel, Paris, France
www.enapart.fr
sales@enapart.fr



65049, ОДЕСА, ВУЛИЦЯ ІВАНА
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3
www.enapart.com.ua
sales@enapart.com.ua



MUNICIPIUL BUCUREȘTI, SECTOR 3,
B-DUL BASARABIA, NR.250, CORP P+5
www.enapart.ro
sales@enapart.ro



〒584-0023 大阪府富田林市若松町
東2丁目2番16号
www.enapart.co.jp
sales@enapart.co.jp



PLAZA NUESTRA SEÑORA DE LAS
NIEVES 12 ,LOCAL ,50012,ZARAGOZA
www.enapart.es
ventas@enapart.es



Складова база „Онгъл“, Склад А2, п.к.
4006, гр. Пловдив, България
www.enapart.bg
sales@enapart.bg



3 Austin Mews, High Street, Hemel
Hempstead, HP1 3AF , United Kingdom
www.enapart.co.uk
sales@enapart.co.uk

MetrolBo

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

RAMND'S PAODUCTS

Pducship	DloidrepuB
ABP06UUU A-W [U0] CAS[807H0B[H4]m	8mart Bressure 7ransmitter
CAH02TU	Ndustrial diaphragm seal
BEL0]UUU	Electromagnetic flowmeter
81E065 381E065[Umd6M[-4]Um(-evel probe
BSE06T)ifferential pressure transmitter with field housin g
ABS06UUUA-W	differential pressure transmitter
P71:]0]UU01][6:0Bt]UU0C06	7hermometer mit :A0Anschlusskopf
P71:]05U01][6:0Bt]UU0C06	7hermometer mit :A0Anschlusskopf
ABPE06UUUB)	Bressure 7ransmitter
BPE06T[U...]Ubar[B][][6:B7L	Bressure transmitter
ABSE06UUU1[065U...65UBa[U0]UUBa[BP-	8LAS7)NFFESE:7NA- BSE88JSE 7SA:8LN77ES
ESD0U]0UTH0K	8schwimmerschalter
ESD0U]0UTH0T.U	8schwimmerschalter
ABP06UUU[A-W[U...XUU kB(8mart Bressure 7ransmitter
AB706T	8mart temperature transmitter
ABN8065U0]UU0Sst0NA:07UU0BU0L]0WU0AU	ABN806[Electropneumatic Positioner
-L05	50valve manifold
ABS06UUU1A-W[U...65 mbar[U...]UUUBa[BP-)ifferential Bressure 7ransmitter
ABP06UUUA-WEGd[U0KULpa][][6.:p7	8mart pressure transmitter
ABP6UUUA-W[EGd[U 06.5LBa][[6 : :B7	8mart pressure transmitter
ABPE06UUU	8mart Bressure 7ransmitter
7ype! BPE06T	Bressure 7ransmitter, wetted parts 88K]R-
BL80+XU7)igital indicator with relay outputs
BPE06T[LS[U...]Ubar[B][1B 3Dastelloy(Bressure transmitter
ABP06UUUA-W, accuracy U.UX 5@	8mart Bressure 7ransmitter ABP0
AB706UUUA-W,-46X]mm	8mart 7emperature transmitter type AB706UUUA-W
AB706UUUA-W,-4T]+LL	8mart 7emperature transmitter type AB706UUUA-W
/80KUE9]	isolator
/80KUE9][65-[U0]U-	transmitter
AB706UUUA-W	8mart 7emperature transmitter type
ABSE06UUU 3male thread L6UG].5 (8mart)ifferential Bressure 7ransmitter
ABSE06UUU 3]T: :B7(Brecision pressure transmitter
BPE06T [EGia [UO]LBa [BH [L	BSE88JSE 7SA:8LN77ES
BPE06T[EGia [UO]LBa [BH [PL6UG].5	BSE88JSE 7SA:8LN77ES
-N06TA-W 0 -N06TA-W[EGd[88[NBRX[Bt]UU] 0TU...TU] P[WS1:[EGd[-4]RUmm	8mart temperature transmitter

Product	Description
CS087A-TDWL	touch switch
CS087A-LR	CS-Touch Switch
P11EDBPZ-08-01	touch sensor switch
STM14A	Stop mini STM with switch
P10DATPA-AL	
H4A-12-05S	Sensor head
CSH121B-AL	Positioning Switch
CSJS50A	
CS067B-L	Contact touch switch [CS series]
P11DMB-21-02H	Touch sensor
STM32A	sensor
CS067A-B	Positioning Switch
CS067A	Precision pushbutton switch
PTP5M3CB-L	Precision pushbutton switch
PT5M1CB	Ultramini precision button switch (PT)
PTP5M1CB	
H4A-18-13H	Sensor Head only
SP060A	SWITCH
P11EDB-DULD	Switch
P11DDB-DU	sensor
H4A-18-13S	Metrol Sensor
H4A-12-90S	Tool Setter for CNC Lathe
H4A-12-90H	sensor head
H4E-12-07S	Sensor
T24E-13-56	tool setter
H4A-18-50	Tool Sensor
H4A-18-06	Tool Setter for CNC Lathe
EX-6600-025	gas spring
T1001-04HJ+DJ2-01AS	sensor
EX-0500-050	Nitrogen Gas Spring
P10DHA-TLGR	High Precision Positioning Touch Switch
H4A-18-42S	Tester
P10DA-15-01V	sensor
P10DA-TCW	MT-touch switch P
H4D-05-07	Tool Setter Sensor
T20B-43-07H	tool setter, microswitch
P10DHB-TAWL	MT-Touch Switch
P11DDB-DLD	High precision push button switch P11 (MT)
H4A-12-46	Lathe Tool Reset probe
P10DB-BU	touch sensor
H1A-68-02	Broken tip control sensor
PT5M1CB-L	Ultra-compact high-precision touch switch [PT series]
CS067A-LG	
TS17D	Air Pipe
CSK087A-L	precision button switch

Product	Description
TS16A+TS15	
CSK087B	Positioning Switch
H4A-18-108S	tool sensor
DPA-SR1	Air Gap Sensor
CSS60A	touch sensor
H4A-30H	Tool Setter for CNC Lathe
P21-ST1	
P11DDB-36-02	
P10DA-AL	uch Switch
H4A-69-03S	TOUCH SENSOR
P11DDB-FULD	Sensor
T24E-04-47	Tool setter
CS087A-R-3M	touch sensor
CSK087B-L	sensor
BP4SWA	Ball plunger
H3A-36-04S	Tool Setter for CNC Lathe
H4A-51-03S	microswitch
CSK087B-TCW	touch sensor
T1001-05HJ+DJ2-01AS	TOOL SENSOR
H4B-ST1-08S	TOUCH PROBE SENSOR
P11DDHB-08-02S	High Precision MT-Touch Switches
1427-047L-316R-35	Compression Latch 7mm Square with Adjustable Grip Height
PTP5M1CBV	touch sensor
STM82A	Mini stopper switch (STM)
T24E-13-65S	sensor
PT5M3WA	touch switch PT
TM26D-ST1	tool setter, microswitch
CSH121B-A	touch sensor
H4A-08-07H	Sensor Head
NG1-010-M6	Gas shock absorber
PT5S3CB-L	Switch
TM26D-2-3-02	TOOL SETTER
BP5MWA	touch switch BP
T24E-13-46S	
P10DL-01-11	touch sensor
P11EDB-07S	touch sensor
H4A-08-02AH	Metrol Tool Setter Sensor Probe
H4DZ-05-18H	Tool sensor
H4D-05-01S	sensor
H4A-08-08S	
H4DZ-05-18S	Tool sensor
P10DHA-TML	limit switch
PT5M3CB	
H3A-37-12	sensor
BP060A-HT2	touch switches bp

Product	Description
H1A-68-02 / 18T20082	microswitch
T24D-01	tool setter
H4A-53-01H	
STS080PA	Stopper bolt touch switch
H4DB-02-12A	Sensor Tool Setter
GN-BP5MA-R	vacuum switch
KS21PA	CONTACT SENSOR
138708 MET6058-PU—12-11-0105	cylinders
T1001-06HJ+DJ2-01-02AS	tool setter
T24E-13-69S	tool setter
DFM3-L-W2-P-V	Sensor
DFM3-R-W2-P-V	Sensor
H4A-12-104S	tool sensor
BA-4A	sensor input/output board
H5C-01H	Sensor Head (tool setter)