



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Ağaoğlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Metrol

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">BP060A</a>	Ultra-compact ball plunger touch switch [BP series]
<a href="#">CS087A</a>	Contact Switches
<a href="#">H4A-08-07S</a>	Sensor
<a href="#">H4A-04-00A</a>	tool setter
<a href="#">H4A-08-02A</a>	Tool Setter for CNC Lathe
<a href="#">H4A-12-05H</a>	tool sensor
<a href="#">H4A-12-20S</a>	Tool Setter
<a href="#">H4A-18-34</a>	presetting head
<a href="#">H4A-30S</a>	Tool Setter for CNC Lathe
<a href="#">H4D-05-07H</a>	Tool Setter for CNC Lathe
<a href="#">P10DB-A</a>	Metrol Sensor
<a href="#">P10DLB-A</a>	High Precision Touch Limit Switch
<a href="#">PT5M1WB</a>	(touch sensor)
<a href="#">SP080A</a>	touch sensor
<a href="#">STM84A</a>	(touch sensor) category:microswitch
<a href="#">STS080PA-L</a>	touch sensor
<a href="#">PT5M1WA</a>	touch switch
<a href="#">T25H-04-03</a>	(tool setter)category:microswitch
<a href="#">H4D-05-25</a>	Metrol Sensor
<a href="#">CS067b</a>	(touch sensor)
<a href="#">CSH121A-AL</a>	Positioning Switch
<a href="#">P10DA-A</a>	touch sensor; category:microswitch
<a href="#">CS067A-BL</a>	microswitch
<a href="#">CS087A-L</a>	
<a href="#">BP080A-LF</a>	Metrol Sensor
<a href="#">CS067A-L</a>	Metrol Sensor
<a href="#">CSJ055A-L</a>	Metrol Sensor with LED
<a href="#">H4D-08-04S</a>	Metrol Sensor
<a href="#">H4A-12-44</a>	Tool Sensor
<a href="#">T20B-14-50</a>	Metrol Sensor
<a href="#">KS21PA-L</a>	8430771001
<a href="#">STM64A-L</a>	limit switch
<a href="#">STP100UA-L</a>	Metrol Sensor
<a href="#">CSFN105A-H6X</a>	Metrol Sensor
<a href="#">BP060A-F</a>	Ultra-compact ball plunger touch switch [BP series]
<a href="#">Production stoppageBP 100A-LF</a>	Touch Sensor

Product	Description
<a href="#">BP060A-LF</a>	Ball Plunger Limit Switch
<a href="#">P11DDB-DULD</a>	Limit Switch
<a href="#">CSH121A-A</a>	Positioning Switch
<a href="#">H4B-10-13S</a>	Touch Probe Sensor
<a href="#">H4D-05-03S</a>	Tool Setter for CNC Lathe
<a href="#">H4D-05-03H</a>	Tool Setter for CNC Lathe
<a href="#">H4A-12-06S</a>	Tool Setter for CNC Lathe
<a href="#">H4A-12-06H</a>	Tool Setter for CNC Lathe
<a href="#">H4D-05-07S</a>	Tool Setter Sensor
<a href="#">CS067A-LR</a>	Limit switch
<a href="#">CSJ055A</a>	microswitch
<a href="#">T20B-19-09</a>	Sensor
<a href="#">H4A-18-42S</a>	Tool Setter for CNC Lathe
<a href="#">H4D-05-06S</a>	Sensor Head
<a href="#">H4D-05-06H</a>	Sensor Head Only
<a href="#">H4D-05-04S</a>	Sensor
<a href="#">T24D-23-05</a>	tool setter
<a href="#">H4A-12S</a>	tool sensor
<a href="#">H4A-12H</a>	
<a href="#">H4A-18-39S</a>	Tool Setter for CNC Lathe
<a href="#">P11DDBP-DU</a>	Metrol Sensor
<a href="#">STE080PA-L</a>	Sensor
<a href="#">H4A-18-42H</a>	TOOL MEASURING PROBE
<a href="#">P10DLB-01-17</a>	touch sensor
<a href="#">T24D-23 , T019-520-000-84</a>	Touch Sensor
<a href="#">BP080A-L</a>	limit switch
<a href="#">H4A-18</a>	Metrol Touch Sensor
<a href="#">H3B-15-23S</a>	
<a href="#">H4A-53-01S</a>	Metrol Touch Sensor
<a href="#">HT-CS067A</a>	Heat resistance Switch
<a href="#">STM14A-L</a>	Mini stopper switch
<a href="#">H4A-18-40H-B3</a>	Metrol Sensor
<a href="#">P11DMB-21-02S</a>	
<a href="#">HA4-18 (16T07463)</a>	
<a href="#">H4A-18-63S</a>	tool sensor
<a href="#">N-MSTKD-FDA</a>	Contact Switch
<a href="#">T25H-04-05</a>	Tool Setter
<a href="#">H4D-05-01H</a>	Tool sensor (without cable)
<a href="#">SP080A-L</a>	Spring plunger with switch
<a href="#">KS23PA-L</a>	sensor
<a href="#">CSK087A</a>	Precision switch
<a href="#">CSS80A-L</a>	Precision switch
<a href="#">BP060A-L</a>	
<a href="#">STS060PA-L</a>	touch switch
<a href="#">STS060PA</a>	

Product	Description
<a href="#">CS087A-LR</a>	METROL CS-TOUCH SWITCHES CS
<a href="#">P11EDBPZ-08-01</a>	touch sensor switch
<a href="#">STM14A</a>	Stop mini STM with switch
<a href="#">P10DATPA-AL</a>	
<a href="#">H4A-12-05S</a>	Sensor head
<a href="#">CSH121B-AL</a>	Positioning Switch
<a href="#">CSJS50A</a>	
<a href="#">CS067B-L</a>	Contact touch switch [CS series]
<a href="#">P11DMB-21-02H</a>	Touch sensor
<a href="#">STM32A</a>	sensor
<a href="#">CS067A-B</a>	Positioning Switch
<a href="#">CS067A</a>	Precision pushbutton switch
<a href="#">PTP5M3CB-L</a>	Precision pushbutton switch
<a href="#">PT5M1CB</a>	Ultra-small Precision Positioning Switch
<a href="#">PTP5M1CB</a>	
<a href="#">H4A-18-13H</a>	Sensor Head only
<a href="#">SP060A</a>	SWITCH
<a href="#">P11EDB-DULD</a>	Switch
<a href="#">P11DDB-DU</a>	sensor
<a href="#">H4A-18-13S</a>	Sensor wit Cable
<a href="#">H4A-12-90S</a>	Tool Setter for CNC Lathe
<a href="#">H4A-12-90H</a>	sensor head
<a href="#">H4E-12-07S</a>	Sensor
<a href="#">T24E-13-56</a>	tool setter
<a href="#">H4A-18-50</a>	Tool Sensor
<a href="#">H4A-18-06</a>	Tool Setter for CNC Lathe
<a href="#">EX-6600-025</a>	gas spring
<a href="#">T1001-04HJ+DJ2-01AS</a>	sensor
<a href="#">EX-0500-050</a>	Nitrogen Gas Spring
<a href="#">P10DHA-TLGR</a>	High Precision Positioning Touch Switch
<a href="#">H4A-18-42S</a>	Tester
<a href="#">P10DA-15-01V</a>	sensor
<a href="#">P10DA-TCW</a>	MT-touch switch P
<a href="#">H4D-05-07</a>	Tool Setter Sensor
<a href="#">T20B-43-07H</a>	tool setter, microswitch
<a href="#">P10DHB-TAWL</a>	MT-Touch Switch
<a href="#">P11DDB-DLD</a>	High precision push button switch P11 (MT)
<a href="#">H4A-12-46</a>	Lathe Tool Reset probe
<a href="#">P10DB-BU</a>	touch sensor
<a href="#">H1A-68-02</a>	Broken tip control sensor
<a href="#">PT5M1CB-L</a>	Ultra-compact high-precision touch switch [PT series]
<a href="#">CS067A-LG</a>	
<a href="#">TS17D</a>	Air Pipe
<a href="#">CSK087A-L</a>	precision button switch
<a href="#">TS16A+TS15</a>	

<a href="#">CSK087B</a>	Positioning Switch
<a href="#">H4A-18-108S</a>	Switch
<a href="#">DPA-SR1</a>	Air Gap Sensor
<a href="#">CSS60A</a>	touch sensor
<a href="#">H4A-30H</a>	Tool Setter for CNC Lathe
<a href="#">P21-ST1</a>	
<a href="#">P11DDB-36-02</a>	
<a href="#">P10DA-AL</a>	uch Switch
<a href="#">H4A-69-03S</a>	TOUCH SENSOR
<a href="#">P11DDB-FULD</a>	Sensor
<a href="#">T24E-04-47</a>	Tool setter
<a href="#">CS087A-R-3M</a>	touch sensor
<a href="#">CSK087B-L</a>	CS switch
<a href="#">BP4SWA</a>	Ball plunger
<a href="#">H3A-36-04S</a>	Tool Setter for CNC Lathe
<a href="#">H4A-51-03S</a>	microswitch
<a href="#">CSK087B-TCW</a>	touch sensor
<a href="#">T1001-05HJ+DJ2-01AS</a>	TOOL SENSOR
<a href="#">H4B-ST1-08S</a>	TOUCH PROBE SENSOR
<a href="#">P11DDHB-08-02S</a>	High Precision MT-Touch Switches
<a href="#">1427-047L-316R-35</a>	Compression Latch 7mm Square with Adjustable Grip Height
<a href="#">PTP5M1CBV</a>	touch sensor
<a href="#">STM82A</a>	Mini stopper switch (STM)
<a href="#">T24E-13-65S</a>	sensor
<a href="#">PT5M3WA</a>	
<a href="#">TM26D-ST1</a>	tool setter, microswitch
<a href="#">CSH121B-A</a>	touch sensor
<a href="#">H4A-08-07H</a>	Sensor Head
<a href="#">NG1-010-M6</a>	Gas shock absorber
<a href="#">PT5S3CB-L</a>	Switch
<a href="#">TM26D-2-3-02</a>	TOOL SETTER
<a href="#">BP5MWA</a>	
<a href="#">T24E-13-46S</a>	
<a href="#">P10DL-01-11</a>	touch sensor
<a href="#">P11EDB-07S</a>	