



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Barbaros Mah. İhlamur Bul. AĞAOĞLU  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA,PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



MUNICIPIUL BUCUREŞTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## NasonBs

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### NRAD'S PORU'CTr

Osduacn	'Bocstendti
<a href="#">M-56C6.6M</a>	2alibration Fesistor, M6 m/, 2lass 6.6-
<a href="#">M-56C6.M</a>	2alibration Fesistor, M66 m/, 2lass 6.6-
<a href="#">M56HR6V</a>	6,6MTU1 CM69M63Thm
<a href="#">-PMHCS66M</a>	levice and documentation software
<a href="#">-PMHC0666M</a>	1illiohmmeter FENGNBT1AB
<a href="#">-PMHCD66M</a>	MQY rack mounting kit
<a href="#">-PVMC066M</a>	2lamping device
<a href="#">-PQ-C066M</a>	temperature sensor
<a href="#">V56-CH66X</a>	1iniatur C Iruckkraftsensor
<a href="#">V56-CH6M6</a>	Load cell
<a href="#">V5M5CX6X6C06M6</a>	Nubminiature 2ompression Load 2ell with Tverload Sr otection, X6 J
<a href="#">V5PMCH66-</a>	Srecision miniature force sensor
<a href="#">V5PXCX-66CJ666N666</a>	tensionCpressure force sensor
<a href="#">V5PXCH66MCJ666N666</a>	1iniature Bension and 2ompression Load 2ell, M666 J
<a href="#">VX-5CH66XCN666N666</a>	Srecision Bension and 2ompression Load 2ell, X666 J
<a href="#">VH5MPCX66XC0X6M</a>	Fotating Borque Nensor with NlipCFing Bransmission,X66 Jm
<a href="#">V4M-CX6</a>	Sotentiometer
<a href="#">V4MPCM6</a>	Sotentiometrischer Wegtaster
<a href="#">V45MCX6-XC0X6M</a>	Gnductive position sensor
<a href="#">QMA87</a>	AdOusting a measurement chain
<a href="#">Q-5PCGSHX</a>	Amplifier 1odule for Ntrain 7auge Nensors, GSHX Srøection
<a href="#">-P-QC366M</a>	measurement cable
<a href="#">QQ66C0MHX</a>	1GJCI coupling plug
<a href="#">-P-VCD66M</a>	Syrometer
<a href="#">QQ66C0-6Q</a>	2oupling plug
<a href="#">QQ66C0H6Q</a>	Q pin ICsub socket
<a href="#">-P-QCS66M</a>	Labwindows Noftware
<a href="#">VHHMCXM66C06MM6</a>	Srecision Borque Nensor with JonC2ontact Nignal Bransmission, M66 Jm
<a href="#">VHQ6CXM6C05-H</a>	1etal bellows coupling for torque sensors
<a href="#">-P65C066X</a>	FENGNBT1AB digital ohmmeter
<a href="#">VX-5CH6-6CN666N666</a>	Srecision trainCpressure force sensor
<a href="#">VH66C-MM-CFCX6M6</a>	converter
<a href="#">-PV-A</a>	Einspannvorrichtung
<a href="#">-P66CD66P</a>	Bransportkiste aus Uol)werkstoff
<a href="#">VHHMC5M66C06666</a>	lynamic precision torque sensor











Product	Description
<a href="#"><u>CD-1A2-30J/ELAU</u></a>	High Pressure Switch CD
<a href="#"><u>SQ3</u></a>	
<a href="#"><u>CJ-1B2-30J/HM</u></a>	
<a href="#"><u>TM-7B-160R/HR</u></a>	
<a href="#"><u>NASON SQ-3</u></a>	ADJUSTABLE PRESSURE SWITCH
<a href="#"><u>XM11B-1400F/WD331</u></a>	
<a href="#"><u>WX-1C-1600J/HR49</u></a>	
<a href="#"><u>TM-7B-120R/HR</u></a>	
<a href="#"><u>SM-2C-16F-QCGG</u></a>	engine temperature sensor
<a href="#"><u>XM-11A-100F/HR435</u></a>	
<a href="#"><u>XM-11A-100F/HR435</u></a>	pressure switch
<a href="#"><u>SM-1C-5R/HRAT</u></a>	
<a href="#"><u>XM-1C-1700F/HR</u></a>	
<a href="#"><u>SM-2A-50R/0C</u></a>	Nasson Press Switch
<a href="#"><u>SM-2C-5F/QC603</u></a>	oil pressure switch
<a href="#"><u>SM-1C-5R/HR</u></a>	
<a href="#"><u>ls-143739-3</u></a>	
<a href="#"><u>MM-1A-45R/WDAT</u></a>	
<a href="#"><u>23520024</u></a>	PRESSURE SWITCH
<a href="#"><u>SM-1A-25R/HRAT</u></a>	
<a href="#"><u>CD-1C5-230J/WDAU512</u></a>	pressure switch
<a href="#"><u>SM-2A-9F-WL88</u></a>	Low Pressure Switch
<a href="#"><u>MM-60A S4R/8WLNE</u></a>	
<a href="#"><u>TM - 2C - 210R - QC - 110</u></a>	water high temperature switch
<a href="#"><u>CD-1C5-320J/WDAU512</u></a>	
<a href="#"><u>HT-1B-265R/EL12</u></a>	TEMP SWITCH
<a href="#"><u>WX-4B-1900J/HH</u></a>	WX ADJUSTABLE HYD HP SWITCH
<a href="#"><u>MM-2C-5R/AT</u></a>	
<a href="#"><u>SM-1B-6F/WP</u></a>	
<a href="#"><u>VF-48C-22R/HRATAQ6</u></a>	
<a href="#"><u>TM-2B-212R/WP</u></a>	Temperature Switch
<a href="#"><u>TD-2B-212R/WP</u></a>	Temperature Switch
<a href="#"><u>WX-39C-1200J/HH</u></a>	High Pressure Switch
<a href="#"><u>LS-25X24MB</u></a>	
<a href="#"><u>XM-1B-500 F/WL</u></a>	pressure switch
<a href="#"><u>XM-5B-1050R</u></a>	High Pressure Switch
<a href="#"><u>XM-11B-72.5F/HH204</u></a>	pressure switch
<a href="#"><u>MM-6A-295R/WL84</u></a>	
<a href="#"><u>HT-2C-120R/HR</u></a>	
<a href="#"><u>SM-2C-20F/HR</u></a>	
<a href="#"><u>CD-11C4-150J/HR</u></a>	
<a href="#"><u>HT 5A-140R/QCAH</u></a>	
<a href="#"><u>CJ-U1C3-080G/HM</u></a>	
<a href="#"><u>TM-1C-215R/PD</u></a>	
<a href="#"><u>SM-2B-7F/QC</u></a>	

Product	Description
<a href="#"><u>LM-1C-200R/WL</u></a>	pressure switch
<a href="#"><u>1018A30</u></a>	Pressure switch
<a href="#"><u>SM-2C-70F</u></a>	Pressure Switch
<a href="#"><u>MM-2C-10R/WL</u></a>	switch
<a href="#"><u>MS90530-1</u></a>	switch
<a href="#"><u>SM-1B-6F/P811</u></a>	
<a href="#"><u>TD-7C-203R/QC</u></a>	
<a href="#"><u>HT-5A-115R/QCAH</u></a>	Temperature Sensor
<a href="#"><u>XM-17B- 1700F/WD501</u></a>	HYDRAULIC VALVE
<a href="#"><u>SP-1C-4R/P60</u></a>	
<a href="#"><u>SM-2C-9F/AT</u></a>	pressure switch
<a href="#"><u>TD-17C-240R</u></a>	Snap-disc temperature switch
<a href="#"><u>L20-40X30DMB-RH</u></a>	
<a href="#"><u>MM-1C-25F/AU</u></a>	
<a href="#"><u>MM-1C-35F/AU</u></a>	
<a href="#"><u>SM-2C-50R/438</u></a>	pressure switches
<a href="#"><u>CE-05X025MSM</u></a>	PNEUMATIC PISTON
<a href="#"><u>SM-14C-80F/QC</u></a>	
<a href="#"><u>SM-1A-25F/7QL</u></a>	switch
<a href="#"><u>SM-1A-25R/7CL</u></a>	PRESSURE SWITCH
<a href="#"><u>SM-2C-50F/HR</u></a>	
<a href="#"><u>CD-T1C1-10G/HR</u></a>	High Pressure Switch
<a href="#"><u>SM-T1C-10F/HR</u></a>	Low Pressure Switch
<a href="#"><u>CM-17A-55F/QC</u></a>	PRESSURE SWITCH
<a href="#"><u>SM-1B-60F/PD</u></a>	Pressure switch
<a href="#"><u>SM-2C-40F/HR</u></a>	PRESSURE SWITCH
<a href="#"><u>TM-1C-180R/WP</u></a>	
<a href="#"><u>XM-19A-50F/ESAU609</u></a>	
<a href="#"><u>TT-E11B-239R/QC</u></a>	TEMPERATURE SWITCH
<a href="#"><u>MM-1C-4F/EL353</u></a>	
<a href="#"><u>SM-2C-15F/QCVT</u></a>	LOW PRESSURE SWITCH
<a href="#"><u>VM-2C-18R/CL21</u></a>	Pressure switch
<a href="#"><u>CD-1A1-10J/ELAU</u></a>	High-Pressure Switch
<a href="#"><u>VM-2C-12F/CL20</u></a>	
<a href="#"><u>VF-2C-25R/QCAQ17</u></a>	Open switch
<a href="#"><u>XM-1C-1500R/HHAU</u></a>	PRESSURE SWITCH
<a href="#"><u>HT-1C-150R-HR</u></a>	Temperature switch
<a href="#"><u>XM-11A-100F/HH</u></a>	Pressure Switch
<a href="#"><u>SM-2C-15F/AT</u></a>	PRESSURE SWITCH
<a href="#"><u>SM-2C-25F/AT</u></a>	PRESSURE SWITCH
<a href="#"><u>CD-6B-2150R/WD194</u></a>	Pressure Switch
<a href="#"><u>SM-2C-15F/HR</u></a>	
<a href="#"><u>MM-19A-10F/ESAU302</u></a>	
<a href="#"><u>SM-1C-8F/HHNF787</u></a>	Pressure Sensor
<a href="#"><u>SM-2C-50R/NPVTAT956</u></a>	

Product	Description
<a href="#"><u>SM-2C-15F/QC472</u></a>	
<a href="#"><u>TM-1C 235R/AT</u></a>	
<a href="#"><u>TT-D1A-220R/QC</u></a>	
<a href="#"><u>TM-1C 234R/AT</u></a>	
<a href="#"><u>SM-2C-15F</u></a>	
<a href="#"><u>TD-7A-140R</u></a>	
<a href="#"><u>wx-6c-200g/qc</u></a>	High pressure switch
<a href="#"><u>XM-1C-1200F</u></a>	
<a href="#"><u>MM-2C-40F/NP51</u></a>	pressure switch
<a href="#"><u>WX-4B-1900J/HR</u></a>	switch
<a href="#"><u>LM-2C-130R/WLAT</u></a>	
<a href="#"><u>CD-1C7-1800J/HH</u></a>	
<a href="#"><u>MM-2C-60R</u></a>	switch
<a href="#"><u>SM-17B-10 F/WL</u></a>	
<a href="#"><u>HT-1C-215R</u></a>	
<a href="#"><u>WX-1C-600J/HR</u></a>	
<a href="#"><u>XM-11A-1500R/HR</u></a>	
<a href="#"><u>CD-1C4-150J/MPAT</u></a>	
<a href="#"><u>WX-1C-600R/HR</u></a>	
<a href="#"><u>SM-2C-10F/QC (1/8NPTF ISOLE.)</u></a>	
<a href="#"><u>MM-30B-10R/WL</u></a>	Pressure switch
<a href="#"><u>SM-2C-4F</u></a>	
<a href="#"><u>NT41-03-D-0100-G-Q00-5</u></a>	PRESSURE TRANSDUCER
<a href="#"><u>SM-2C-60F/WP</u></a>	PRESSURE SENSOR
<a href="#"><u>SM-2C-15F/WP</u></a>	PRESSURE SENSOR
<a href="#"><u>SM-2B-20F/WL281</u></a>	
<a href="#"><u>SM-2A-4R/5WLAU588</u></a>	pressure switch
<a href="#"><u>TT-F1B-265R</u></a>	Temperature switch
<a href="#"><u>TT-D3A-131R/QC</u></a>	switch
<a href="#"><u>02250130-666</u></a>	
<a href="#"><u>sm-1C-20R/QC</u></a>	sensor
<a href="#"><u>SM-1C-58F/HH</u></a>	SWITCH
<a href="#"><u>CD-1C4-150J/HR</u></a>	
<a href="#"><u>TM-2R-235R/QC29</u></a>	
<a href="#"><u>TT-D3R-235/QCGG12</u></a>	
<a href="#"><u>SM-2C-20R/QC</u></a>	PRESSURE SENSOR
<a href="#"><u>SM-14A-2F/QCAT11</u></a>	Switch
<a href="#"><u>CD-6A4-0250G/WL</u></a>	Hydraulic Pressure Sensor
<a href="#"><u>SM-2C-5F</u></a>	LOW PRESSURE SWITCH
<a href="#"><u>SM-2A-20R/QC</u></a>	pressure switch
<a href="#"><u>LM-1C-10R/5WDAUVL247</u></a>	sensor
<a href="#"><u>TM-2A-140R</u></a>	
<a href="#"><u>SM-2C-12F/WD/AU</u></a>	
<a href="#"><u>MM-2C-60R/WDAT</u></a>	
<a href="#"><u>CD-1A6-1000J/HR</u></a>	

Product	Description
<a href="#"><u>LS-218275</u></a>	
<a href="#"><u>LH02201</u></a>	CYLINDER
<a href="#"><u>TM-7C-175R/HR</u></a>	Thermostat
<a href="#"><u>SM-T1C-10F/HRVT</u></a>	
<a href="#"><u>CD-T1C1-10G/HRVT</u></a>	
<a href="#"><u>SM-2B-90F/CP35</u></a>	
<a href="#"><u>TD-1C-120R/AT</u></a>	
<a href="#"><u>SM-2C-12F/WP</u></a>	
<a href="#"><u>SM-2C-100F/WP</u></a>	
<a href="#"><u>MM-6A-205R/WL85</u></a>	
<a href="#"><u>LM-2A-60R/AT</u></a>	
<a href="#"><u>CD-11B6-1250J/WL</u></a>	pressure sensor
<a href="#"><u>VM-1B-4R/HRVTAU59</u></a>	
<a href="#"><u>TD-2C-150R/HR</u></a>	
<a href="#"><u>TT-F1A-70F</u></a>	TEMP SWITCH
<a href="#"><u>NT100-03-K-0300-G-B00-4</u></a>	
<a href="#"><u>MM-2B-10F (NC)</u></a>	PRESSURE SENSOR
<a href="#"><u>TM-2A-95R (NO)</u></a>	TEMPERATURE SENSOR
<a href="#"><u>TT D6B 140R/WL</u></a>	
<a href="#"><u>LM-2C-290R/HH</u></a>	
<a href="#"><u>SM-1B-20R/QC</u></a>	PRESSURE SWITCH
<a href="#"><u>WX-1C-3000J/HR</u></a>	
<a href="#"><u>SM-1A-60F-QC/AU</u></a>	
<a href="#"><u>CD-T5B5-450J/ELAU638</u></a>	
<a href="#"><u>CD-6A-250F/MPAU304</u></a>	
<a href="#"><u>MM-1C-12F/EFEP378</u></a>	
<a href="#"><u>CD-T1A1-10J/ELAU</u></a>	
<a href="#"><u>SM-19C-22F/HRATBT</u></a>	oil pressor sensor
<a href="#"><u>VM-1A-5R/AU</u></a>	
<a href="#"><u>XM-6B-1300F/447</u></a>	
<a href="#"><u>SM-1C-8F/HH787</u></a>	
<a href="#"><u>LS-06730</u></a>	
<a href="#"><u>TT-F43A-130R</u></a>	
<a href="#"><u>TD-1A-200R/WDAT28</u></a>	temperature sensor
<a href="#"><u>VF-1C-10R/QC</u></a>	
<a href="#"><u>TD-26A-203R/QC</u></a>	switch
<a href="#"><u>TT-D1B-86F/QC</u></a>	
<a href="#"><u>SM-14C-10F/695</u></a>	
<a href="#"><u>LM-2C-200F/WL</u></a>	
<a href="#"><u>TT-D3B-230R/ QC235</u></a>	
<a href="#"><u>MM-2C10F-QC</u></a>	
<a href="#"><u>TD-5B-205R/WLAU</u></a>	
<a href="#"><u>SM-2A-46R/QC</u></a>	pressure switch
<a href="#"><u>MM-2B-75R/WL</u></a>	
<a href="#"><u>WX-6C-950J/WL</u></a>	

Product	Description
<a href="#">SM-1A-7F/HR</a>	